

# Installation Guide



## Maytag PR CONTROL METER CASE MOUNT

### Cashless Laundry Kit - Contents

Qty	Part Number	Description
1	DSLIM-PR/PD	PR (Meter Case) Card Reader
1	AYS-172036-1	PR/PD Interface Cable
1	TBD	Meter Case Mounting Bracket
Qty	Required Tools	
1	T-20-T (TT20) Security Screwdriver	
1	Phillips Head Screw Driver – medium sized	
TBD	Required tools to remove coin-drop/slide and coin vault	

If you cannot locate and/or identify any of the components listed above, please contact Micropayments Customer Service at:

**Tel: 800-332-4835 Press 2**



## **!! WARNING !!**

**MAKE SURE THAT ALL POWER HAS BEEN REMOVED FROM THE MACHINE BEFORE ATTEMPTING TO INSTALL ANY HARDWARE OR CABLING!**

## **Preparation**

Disconnect the laundry machine from all power sources before performing any of the following steps.

The Heartland Micropayments **SLIM-PR/PD** reader is designed to be installed in Maytag PR/PD model washers and dryers. The readers are configured and programmed with cards. In addition, cards are used to view total non-resettable debits, broken down by user or test vends and to place the PR machine in service mode. The cards are described as follows:

- **System Key Card** - Loads the encryption keys in the reader for card authentication.
- **SLIM Programming Card** - Programs the Site Codes, discount levels and card maximum setting into the SLIM reader
- **View Debits Card** - Allows the viewing of grand total debits broken down by user and test vends
- **Debit Maintenance Card** - Used by the service technician to perform test transactions
- **SLIM Service Mode Card** - The SLIM Service Mode Card is used to place the laundry machine it is attached to into service mode, thus preventing the need to dismantle the machine.

## **Installation**


**1**

Open the backsplash on the machine by removing the 4 screws at the corners of the panel, lower the back-splash to access the control board. Then open the access hatch of the meter case.



**2**

If required, remove the coin drop mechanism. Connect the white end of the interface cable supplied with the kit (**AYS-172036-1**) to the control board as shown in the yellow circle, at right.

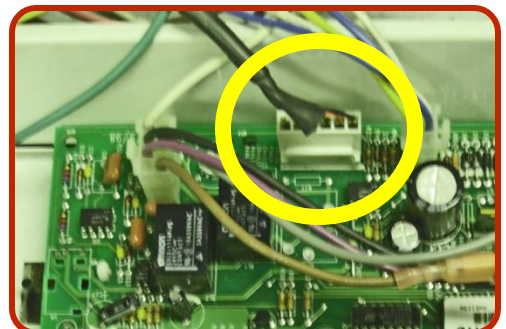

**3**

Route the interface cable from the control board, into the meter case, and ensure that a good amount is accessible from the opening.



**4**

Attach the SLIM PR/PD reader to the installation bracket that was supplied with the kit (*bracket types will vary according to machine type*). To attach, loosen the 4 shoulder screws on the back of the reader facing, place bracket over the reader from the rear, and tighten shoulder screws to secure (*do not over tighten*).



**5**

Connect the free end of the supplied interface cable to the mating connector on the rear, left side of the card reader. as shown in the yellow circle.



**6**

Insert reader & bracket into the coin drop opening, align mounting holes/pins, and secure with appropriate hardware. Close the back panel on the machine while ensuring that none of the wiring is pinched between the front panel and the console housing. Replace the 4 panel screws and tighten them snugly..



# Programming & Testing

## Programming

Connect power to the machine and verify that the machine displays a normal startup sequence without errors.

When the startup sequence is complete, the display should indicate “F-62”.

You may now program the device using the following cards:

1. Insert the **System Key Card** into the card reader . Remove when prompted.
2. Insert the **Price & Configuration Card** into the card reader . Remove when prompted.
3. Insert the **Sitecode Definition Card** into the card reader . Remove when prompted.

## Testing

Insert a **Debit Maintenance Card** or **User Card** into the card reader.