

**American Changer Corp  
1400 65<sup>th</sup> Place  
Ft. Lauderdale, FL 33309**

# VALICHANGER OPERATIONS MANUAL SERIES AC2005

**Parts & Service:(888)741-9840**

**Sales:(800)741-9840**

**Parts & Service Fax:(954)917-5204**

*Internet Address: [www.americanchanger.com](http://www.americanchanger.com)*

*Service Questions?: E-mail: [service@americanchanger.com](mailto:service@americanchanger.com)*

## Table of Contents

### SECTION A: SET-UP & INSTALLATION

<b>Hopper Error Codes</b>	<b>2</b>
Uncrating & Setup	3
<b>Mounting instructions</b>	<b>3-4</b>
Filling the Hoppers	4
Using the Dump Mode	4
DIP Switches	4+6
<b>Hopper Pay out Table</b>	<b>5</b>
Bonus Pay Out Table	6
Payout sub modes	7
Fuse	7
Wiring definitions	7
Indicator Lights	7
<b>About the Hopper/Coin sizes</b>	<b>8</b>
Functional Descriptions	9

### SECTION B: VALIDATOR INFO

CoinCo to Mars Setup	10
<b>CoinCo Validator information</b>	<b>12-16</b>
Mars Validator information	17-22

### SECTION C: HOPPER INFO

Un-Jamming the Hopper	26-28
-----------------------	-------

### SECTION D:

#### TROUBLESHOOTING INFO

Troubleshooting Guide	30
Technical Flow Diagram	31-32

### SECTION E: PARTS LISTS

Cabinet Parts Breakdown	33
Parts Hopper MKIV	34
Parts CoinCo Bill Validator	35-38
Parts MARS Bill Validator	39-41

<b>Mars Service Centers</b>	<b>42-44</b>
CoinCo Service Centers	45

Rev. DBCG-1-A Jan'04

## Specifications

Operating voltage	120 VAC +10/-15 %
Power consumpt.(controller only, add hopper and validator)	10w
Operating temperature	32 - 130 degrees Fahrenheit
Interface to Hoppers	24vdc & 12vdc 1.5 amps max.
Interface to Validators	120vac .5 amps max.

## Warranty

CoinCo MAGPRO 00 B & MARS AE2601 Validator is warranted for two years from date of purchase.

### COVERED

¥ Defect in workmanship or material.

### NOT COVERED

¥ Damage caused by physical abuse.

¥ Misapplication

¥ Vandalism

¥ End users attempt, on his own to repair item

¥ Cleaning maintenance

*It is the End User's responsibility to follow cleaning maintenance procedure outline on page 15/19.*

*Any unit coming in for repair requiring only a cleaning will be charged a flat rate of \$65.00 plus shipping and handling.*

## Dispensing System and Logic Board

The dispenser and logic board is warranted for one year from date of purchase.

### COVERED

¥ Defects caused by material or workmanship.

### NOT COVERED

¥ Damage caused by physical abuse.

¥ Misapplication

¥ Vandalism

¥ End Users attempt, on his own to repair.


**A Return material authorization number (RMA #) must be obtained before returning a unit for repair. A copy of invoices must accompany any and all warranty work.**

## Attention Please:

American Changer is now building in a Surge Suppressor on every main logic board made after September 1<sup>st</sup>, 1998. This will help eliminate power related noise problems for our customers. It will not protect you from large voltage spikes or lightning strikes over 150VAC.

If this is a concern for your area of business, we recommend purchasing a surge protector locally  
**NOTE: A POWER STRIP IS NOT A SURGE PROTECTOR.**

Thank You,  
American Changer Corp.  
(888) 741-9840

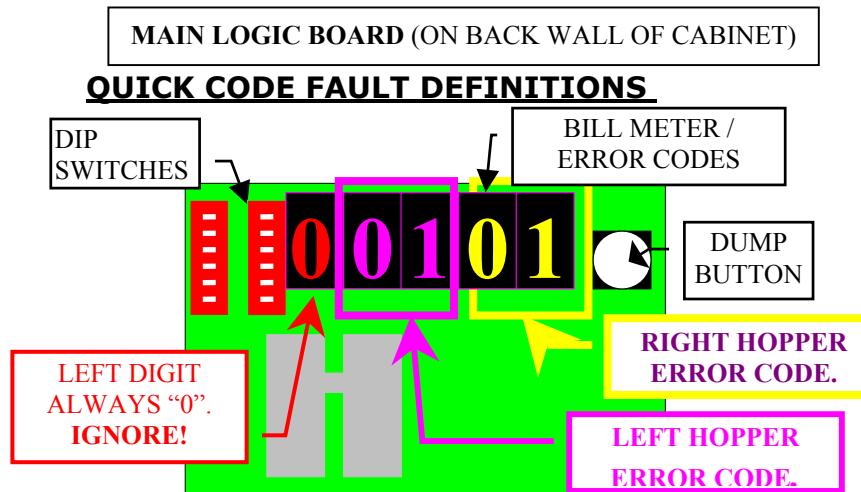

**Press the "DUMP" Button before turning off changer. Match the code to samples below to find out why the hopper(s) were shut down.**

### LEFT HOPPER ERRORS

00000	- NO ERRORS
00100	- LOW COIN
00200	- EXIT WINDOW JAM
00300	- BAD HOPPER BOARD
00400	- JAMMED
01000	- JACKPOT PREVENTED

### RIGHT HOPPER ERRORS

00000	- NO ERRORS
00001	- LOW COIN
00002	- EXIT WINDOW JAM
00003	- BAD HOPPER BOARD
00004	- JAMMED
00010	- JACKPOT PREVENTED

IF THE "EMPTY" LED IS LIT, LOOK FOR CODES FOR BOTH HOPPERS TO BE DISPLAYED!!!!!!

## UNCRATING AND SET-UP

Remove your AC2005 changer from the shipping box. Open the door. (*The T-handle is a screw-in type and therefore, must be turned at least 10 times counter-clockwise until it opens.*) Inspect for any connectors or components that may have been dislodged during shipping. The lock and keys for your changer will be inside the manila envelope along with this manual. To install the lock, insert the cylinder into the round hole in the middle of the T-handle and push until it stops. Now turn the key and lock until you hear it "snap." Turn the key counter-clockwise  $\frac{1}{4}$  turn and remove the keys.

**NOTE: The only way to get a duplicate set of keys made is to save the red tag that comes between the keys. This ID # starts with "ACC #####".**

**Write your Key # here "ACC\_\_\_\_\_".  
ALL KEY ORDERS TAKE 4-6 WEEKS!!!**

**NOTE: THE METER ON THE MAIN LOGIC BOARD  
CANNOT BE RESET TO ZERO!!!**

### TEST:

Before permanently installing the changer, do a functional test to verify that there is no shipping damage to your new changer(s).

Extend the power cord through the hole in the back of the changer or the bottom and plug it into a *grounded 120vac outlet*. The dip switches are already set for a 4 coin per dollar payout of the hoppers, and the Bill validator is ready to accept \$1-\$5-\$10-\$20 dollar bills.

**Fill the each hopper with at least 100 coins.** On the main logic board turn the switch on the bottom right corner "ON". (SEE FIG. 1 ON PG.3) The rocker switch has a "1" and "0" printed on it. When the "1" is pressed down the changer is "ON".

## MOUNTING THE AC2005 TO A WALL

**IF YOU ARE UNSURE IN ANY WAY IN PROCEEDING WITH THE FOLLOWING STEPS, PLEASE HIRE A LOCAL PROFESSIONAL ELECTRICIAN TO MOUNT YOUR CHANGER FOR YOU!**

1. Disconnect any and all AC power going to the series 2001 changer. (See fig. 1)
  - A. Unplug the AC line cord from the bottom of the board.
  - B. Unplug the validator connectors on the right side of the board.
  - C. Unplug the hoppers harness connectors on the left side of the board.
  - D. Unbolt the ground wire from the right side of the cabinet.
  - E. Remove the main logic board and hoppers from the inside of the changer.
  - F. Put the nuts back on the studs to avoid losing the brass spacers on the studs.
2. Slide the hoppers out of the cabinet.
3. Note: You will need to verify with the building code to see that is allowable to plug the changer into a 3 prong grounded outlet. If it is not, there must be 120VAC run through conduit to the changer. If it is not required, proceed to step #6.
4. Let the electrician run the conduit, install the new breaker, wire and help decide how the wiring will enter the changer

(from the back or the bottom). This will affect the mounting location.

5. After the conduit has been installed, proceed with the mounting.
6. Locate the 4 punch-outs on the back wall of the changer. Using a screwdriver and hammer knock the punch-outs out by hitting them from the inside of the changer.
7. Using a stud locator, find a location to hang the changer by locating the wall studs.
8. Find an appropriate wall to bolt the changer into. The wall should have studs or be constructed of concrete. Consult a professional with any questions you may have.
9. **NOTE: HANGING THE CHANGER FROM LESS THAN ALL 4 HOLES MAY BE DANGEROUS. EACH HOLE NEEDS A BOLT THROUGH EACH ONE MOUNTED SECURELY TO THE WALL. MOUNTING THE CHANGER IN ANY OTHER WAY MAY RESULT IN THE CHANGER BEING TORN OFF OR FALLING OFF THE WALL RESULTING IN PERSONAL OR CUSTOMER INJURY ALONG WITH ELECTRICAL SHOCK.**
10. Choose a height to mount the changer keeping in mind that a handicapped person in a wheelchair should still be able to insert a bill into the bill validator. (We recommend no higher than 4 feet above the ground.)
11. Have someone hold the changer against the wall while someone else marks the holes. **CAUTION: THE CHANGER WEIGHS 85 POUNDS DO NOT EXERT YOURSELF SO THAT YOU MAY CAUSE AN INJURY.**
12. **BEFORE DRILLING THE FOUR MARKED HOLES ENSURE THAT THERE ARE NO ELECTRICAL WIRES, TELEPHONE LINES, GAS, OR WATER LINES BEHIND THE WALL WHICH DISRUPTING MAY CAUSE A LOSS OF LIFE OR PERSONAL INJURY!**
13. Hold the changer back up to the wall. Thread and tighten bolts.
14. Verify that the machine is securely mounted.
15. Reinstall the main logic board.
  - A. Before installing the main logic board, verify that the plastic safety-insulating sheet is still against the back wall where the board will be mounted and that there is a 3/8" spacer on each stud.
  - B. Install the main logic board and properly tighten the nuts.
  - C. Re-bolt the ground wire into the right side of the cabinet.
  - D. Plug the validator connector into the right side of the board.
  - E. Plug the hoppers harness connectors into the left side of the board
16. If the changer is permanently connected through a conduit, proceed to step #18.
17. Feed the AC line cord out the bottom or the back of the changer then perform the following.
  - A. Connect the AC line cord into the bottom of the main logic board.
  - B. Plug the male end into the AC wall outlet. **Do not use an extension cord unless allowed by the building electrical code.**
  - C. **Important:** Attach the line cord clamp to the line cord. Verify it is at the right length and that the line cord is not rubbing against any sharp edges or is

being strained in any way. Then mount the line cord clamp to the studs at the hole. Tighten securely. Installation is finished and you can proceed to the "Filling the Hopper" section.

18. In order to continue you will need to purchase electrical cable conduit, a standard 3-prong AC wall outlet and 12-gauge wire. We highly recommend HIRING a qualified electrician to perform the following!

- A. Install the conduit box on the conduit entering the cabinet in the lower right side of the cabinet.
- B. Secure the 3 wires (hot, neutral, and ground) to the AC wall outlet and the ground wire should also be directly attached to the cabinet ground terminal.
- C. Connect the AC line cord into the bottom of the main logic board.
- D. Plug the male end into the AC outlet just installed.
- E. Properly fold the line cord to avoid sharp corners and any other damage.

19. Proceed to the "Filling the Hoppers" section.

## FILLING THE HOPPERS

When each hoppers has less than 80 - 100 coins left the red "Empty" LED will light on the front of the changer. If you have disconnected your LED make sure the orange wire is going to the terminal on the LED that has the red wired terminal. Whenever the "Empty" LED is "ON" the validator is disabled and it will no longer accept bills.



1. Turn OFF the power on the main logic board.
2. Slide the hoppers out from the cabinet and insert the coins through the opening on the top. *There must be at least enough coins to cover the two gold plates at the bottom of the hoppers. (Somewhere between 160 and 1600 coins minimum to maximum.)*
3. Slide the hoppers back into the hopper plate. **Do not use excessive force!**
4. Turn "ON" the power switch. The "Empty" LED is now off and the bill validator is ready to accept bills.

## USING THE DUMP MODE TO EMPTY THE HOPPERS

1. Open the cabinet door.
2. Turn OFF the POWER switch.
3. Place a suitable container in front of the hoppers to catch the coins.
4. Press and hold the "DUMP" button on the upper right corner of the Main Logic Board. Turn ON the Power switch. The red LED numbers on the main logic board will come on all "00000's". Once the red "00000's" lights up the SECOND time, release the "DUMP" button. If it is not released within one second, the "DUMP" mode is canceled as a security feature.
5. The hoppers will dispense coins until the POWER switch is turned OFF. If the red LED numbers are not counting up rapidly on the Main Logic Board's display the dump mode was not accessed. Please try again.

## THE DIP SWITCHES

The 2005 series changer is capable of dispensing coins in many different pay out modes. Setting the coins out per dollar is controlled by which Dipswitches turned "ON." (Refer to figure 1 for their location.) For example, switch #3 & #5 is "ON" on the left DipSwitch; the payout equals 4 coins per dollar. Two coins alternating per hopper for one dollar.

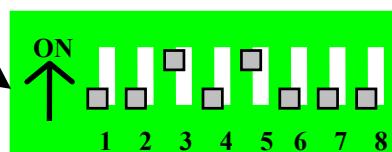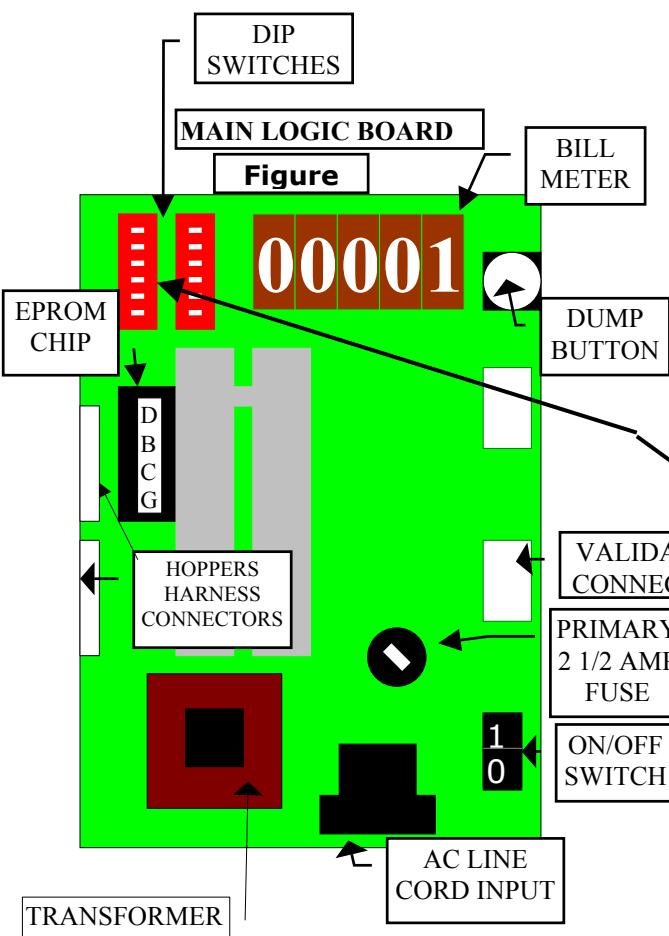

**(THIS IS NOT THE DIPSWITCH BANK FOR SETTING THE BILL DENOMINATIONS.  
(For those dip switches go to page 13-14.)**

**ALL CALCULATIONS ARE BASED ON THE TOTAL COINS YOU SET FOR THE \$1.00 BILL**

*For Mode #8, disregard the \$ sign. (I.e. \$2 = 2 tokens not \$2 in tokens.)*

**THE FOLLOWING BONUS OPTIONS ARE CONTROLLED BY THE RIGHT DIP SWITCH ONLY!!**

**"NO" MEANS "NO BONUS" FOR THIS BILL.**

RIGHT				RIGHT				RIGHT				RIGHT			
SWT	Bonus	Total		SWT	Bonus	Total		SWT	Bonus	Total		SWT	Bonus	Total	
"ON"	\$5	\$10	\$20	"ON"	\$5	\$10	\$20	"ON"	\$5	\$10	\$20	"ON"	\$5	\$10	\$20
5	NO	NO	\$1	1-5	\$1	\$2	\$5	2-6	\$2	\$4	\$10	1-2-6	\$3	\$6	\$14
6	NO	NO	\$2	1-6	\$1	\$2	\$6	2-5-6	\$2	\$4	\$11	1-2-5-6	\$3	\$6	\$15
5-6	NO	NO	\$3	1-5-6	\$1	\$2	\$7	2-7	\$2	\$4	\$12	1-2-7	\$3	\$6	\$16
7	NO	NO	\$4	1-7	\$1	\$2	\$8	2-5-7	\$2	\$4	\$13	1-2-5-7	\$3	\$6	\$17
5-7	NO	NO	\$5	1-5-7	\$1	\$2	\$9	2-6-7	\$2	\$4	\$14	1-2-6-7	\$3	\$6	\$18
6-7	NO	NO	\$6	1-6-7	\$1	\$2	\$10	2-5-6-7	\$2	\$4	\$15	1-2-5-6-7	\$3	\$6	\$19
5-6-7	NO	NO	\$7	1-5-6-7	\$1	\$2	\$11	2-3	\$2	\$5	\$10	1-2-3	\$3	\$7	\$14
3	NO	\$1	\$2	1-3	\$1	\$3	\$6	2-3-5	\$2	\$5	\$11	1-2-3-5	\$3	\$7	\$15
3-5	NO	\$1	\$3	1-3-5	\$1	\$3	\$7	2-3-6	\$2	\$5	\$12	1-2-3-6	\$3	\$7	\$16
3-6	NO	\$1	\$4	1-3-6	\$1	\$3	\$8	2-3-5-6	\$2	\$5	\$13	1-2-3-5-6	\$3	\$7	\$17
3-5-6	NO	\$1	\$5	1-3-5-6	\$1	\$3	\$9	2-3-7	\$2	\$5	\$14	1-2-3-7	\$3	\$7	\$18
3-7	NO	\$1	\$6	1-3-7	\$1	\$3	\$10	2-3-5-7	\$2	\$5	\$15	1-2-3-5-7	\$3	\$7	\$19
3-5-7	NO	\$1	\$7	1-3-5-7	\$1	\$3	\$11	2-3-6-7	\$2	\$5	\$16	1-2-3-6-7	\$3	\$7	\$20
3-6-7	NO	\$1	\$8	1-3-5-6-7	\$1	\$3	\$12	2-3-5-6-7	\$2	\$5	\$17	1-2-3-5-6-7	\$3	\$7	\$21
3-5-6-7	NO	\$1	\$9	1-4	\$1	\$4	\$8	2-4	\$2	\$6	\$12	1-2-4	\$3	\$8	\$16
4	NO	\$2	\$4	1-4-5	\$1	\$4	\$9	2-4-5	\$2	\$6	\$13	1-2-4-5	\$3	\$8	\$17
4-5	NO	\$2	\$5	1-4-6	\$1	\$4	\$10	2-4-6	\$2	\$6	\$14	1-2-4-6	\$3	\$8	\$18
4-6	NO	\$2	\$6	1-4-5-6	\$1	\$4	\$11	2-4-5-6	\$2	\$6	\$15	1-2-4-5-6	\$3	\$8	\$19
4-5-6	NO	\$2	\$7	1-4-7	\$1	\$4	\$12	2-4-7	\$2	\$6	\$16	1-2-4-7	\$3	\$8	\$20
4-7	NO	\$2	\$8	1-4-5-7	\$1	\$4	\$13	2-4-5-7	\$2	\$6	\$17	1-2-4-5-7	\$3	\$8	\$21
4-5-7	NO	\$2	\$9	1-4-6-7	\$1	\$4	\$14	2-4-6-7	\$2	\$6	\$18	1-2-4-6-7	\$3	\$8	\$22
4-6-7	NO	\$2	\$10	1-4-5-6-7	\$1	\$4	\$15	2-4-5-6-7	\$2	\$6	\$19	1-2-4-5-6-7	\$3	\$8	\$23
4-5-6-7	NO	\$2	\$11	1-3-4	\$1	\$5	\$10	2-3-4	\$2	\$7	\$14	1-2-3-4	\$3	\$9	\$18
3-4	NO	\$3	\$6	1-3-4-5	\$1	\$5	\$11	2-3-4-5	\$2	\$7	\$15	1-2-3-4-5	\$3	\$9	\$19
3-4-5	NO	\$3	\$7	1-3-4-6	\$1	\$5	\$12	2-3-4-6	\$2	\$7	\$16	1-2-3-4-6	\$3	\$9	\$20
3-4-6	NO	\$3	\$8	1-3-4-5-6	\$1	\$5	\$13	2-3-4-5-6	\$2	\$7	\$17	1-2-3-4-5-6	\$3	\$9	\$21
3-4-5-6	NO	\$3	\$9	1-3-4-7	\$1	\$5	\$14	2-3-4-7	\$2	\$7	\$18	1-2-3-4-7	\$3	\$9	\$22
3-4-7	NO	\$3	\$10	1-3-4-5-7	\$1	\$5	\$15	2-3-4-5-7	\$2	\$7	\$19	1-2-3-4-5-7	\$3	\$9	\$23
3-4-5-7	NO	\$3	\$11	1-3-4-6-7	\$1	\$5	\$16	2-3-4-6-7	\$2	\$7	\$20	1-2-3-4-6-7	\$3	\$9	\$24
3-4-6-7	NO	\$3	\$12	1-3-4-5-6-7	\$1	\$5	\$17	2-3-4-5-6-7	\$2	\$7	\$21	1-2-3-4-5-6-7	\$3	\$9	\$25
3-4-5-6-7	NO	\$3	\$13	2	\$2	\$4	\$8	1-2	\$3	\$6	\$12				
1	\$1	\$2	\$4	2-5	\$2	\$4	\$9	1-2-5	\$3	\$6	\$13				

### DIPSWITCH OPTION SETTINGS

Mode	I Want My Coin Hoppers to Dispense.....	Left Dip Switch								Right Dip Switch							
		1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
#0	4 Quarters per dollar	0	0	C	0	C	0	0	0	0	0	0	0	0	0	0	0
#1	4 Tokens with a bonus payback in \$1 incr. (Bill Meter counts in \$1's.)	0	0	C	0	C	0	0	0	See bonus table.							
#2	\$1.00 SBA's, Luni's or Tokens and quarters.	0	0	0	0	0	C	0	0	C	C	0	0	0	0	0	0
#3	5 nickles then the balance in quarters.	0	0	C	0	C	C	0	0	0	0	0	0	0	0	0	0
#4	Tokens valued between \$1.25 - \$15.75 the balance paid in quarters	0	0	0	0	0	0	C	0	Set by \$.25 increments							
#5	Tokens valued in even \$1.00 incr. Alternating hopper pay-out.	0	0	0	0	C	0	C	0	Set in \$1 increments							
#6	4 Tokens with a bonus payback in \$1 incr. (Bill Meter counts in \$.25)	0	0	C	0	0	C	C	0	See bonus table.							
#7	Nickles ONLY paid out of both hoppers, with quarter acceptor.	0	0	0	0	C	C	C	0	0	0	0	0	0	0	0	0
#8	4 Tokens with a bonus payback in \$1 incr. (Bill Meter counts in \$1's.)	0	0	C	0	0	0	0	C	See bonus table.							
#9	4 Quarters per dollar with 5 - 10 & 25 Cent Coin Acceptor. + Bonus Options	0	0	C	0	C	0	0	C	See bonus table.							
#10	4 Tokens with a bonus payback in \$.25 incr. (Bill Meter counts in \$.25)	0	0	C	0	0	C	0	C	See bonus table.							
#11	Golf Token Mode (Optional \$1 coin acceptor) (Bill Meter counts in \$1)	0	0	0	0	C	C	0	C	Set in \$1 increments.							
#12	Australian Mode \$1 Coins and Twenty cent pieces	0	0	0	0	0	0	C	C	0	0	0	0	0	0	0	0
#13	5 Dimes and the balance in Quarters	0	0	0	0	C	0	C	C	0	0	0	0	0	0	0	0
#14	Canadian Luni - Tuni Payout Mode See Pg.7 For options on Right Dips.	0	0	0	0	0	C	C	C	0	C	0	0	0	0	0	0

C IS DIPSWITCH "ON"

## **HOW TO USE THE BONUS TABLE**

Think of the bonus table as the total amount of EXTRA tokens after the regular payout, that you wish to receive:

EXAMPLE: PAYOUT: 4 tokens for \$1, 24 for a \$5, 52 for a \$10, 120 for a \$20.

24 tokens = \$1 extra in tokens

52 tokens = \$3 extra in tokens

120 tkns = \$10 extra in tokens.

Now go to the bonus table, find where the \$5 column = \$1

Look over to the \$10 and go down until you see \$3.

Finally go to the \$20 column to where = \$10.

You should be at 1-3-7; Turn "ON" your right dipswitches 1-3-7 to set this payout.

## **DIPSWITCHES**

The following table shows how to set the dip switches to your desired payout.

<b>"ON"</b>	<b>COINS PER DOLLAR</b>
#1	1
#2	2
#3	4
#4	8

*The left DipSwitch controls the left hopper's pay out and the right DipSwitch controls the right hopper's pay out.*

Refer to the next table to set up your changer for the settings you need.

## **MODE DESCRIPTIONS**

Some of the modes are self-explanatory while others have sub modes built into the chip. Here is a list of the modes and sub modes when applicable.

### **MODE 2 - \$1 coins the balance in quarters:**

The quarters for each bill are controlled by the sub mode settings of the right dipswitches #1 & #2.

Neither "ON" – 16 Quarters balance in \$1 coins.

#1 "ON" only – 8 Quarters balance in \$1 coins.

#2 "ON" only – 12 Quarters balance in \$1 coins.

**#1 & #2 "ON"** – 4 Quarters balance in \$1 coins.

### **MODES' #5 & #11 – Setting right dips in "\$1 increments":**

Refer to Page 6 Under "Dipswitches Cont.". But instead of counting up in coins, think of it as dollars.

### **MODE #14 – Canadian \$1 &\$2 coin payout:**

The right dipswitches #1 & #2 can alter the amount of \$1 coins given to each denomination.

<b>Luni's per \$</b>	<b>\$5</b>	<b>\$10</b>	<b>\$20</b>
Neither "ON" -	1L	0L	0L
#1 "ON"	3L	2L	2L
#2 "ON"	3L	4L	4L

The machine will always give 2 Luni's for a Tuni.

## **FUSE**

**High voltage fuse:** This is the primary transformer AC fuse for the main logic board and the validator. Any direct short of the Transformer or validator will cause this fuse to blow. Replace this fuse with a 2-½ amp AS fuse only. **REPLACING THIS FUSE WITH ANYTHING OTHER THAN A 2 ½ AMP "GDC" MAY RESULT IN A FIRE OR AN UNSAFE WORKING CONDITION!!** (See fig. 1 for location of this fuse.)

## **Indicator Lights**

### **Main Logic Board:**

1. Green LED on: AC power applied to the logic board. All fuses are good.
2. Decimal Point:
  - A. Heartbeat - 5 and 12vdc present. The changer is in standby waiting for a bill pulse.
  - B. On Steady - Out of service, Hopper error detected.

### **Validator logic board:**

1. Red LED
  - A. On Steady - Standby Mode, waiting for bill insertion.
  - B. Flashing - Error mode, go to page for error code information.
  - C. Off - The changer "Empty" LED is lit.

## **WIRE HARNESS COLOR AND DEFINITIONS**

### **Validator harness:**

Red -	Switched Hot 120VAC
White -	Neutral 120VAC
Black -	120VAC Low current validator enable
Yellow -	+5vdc credit pulse line
Blue -	-5vdc credit pulse line
Orange -	+12vdc Empty LED
Brown -	-12vdc Empty LED

### **Hopper Harness**

Gray -	Coin counting optic status line
White -	Low coin sense (+5vdc)
Green -	Coin counting optic pay out feedback line
Yellow -	Raw sensor output line
Purple -	Hopper pay out line from main logic board (+)
Brown -	Hopper pay out line from main logic board (-)
Red -	+12vdc logic board supply voltage
Black(s) -	-12v, 24v low coin sense ground
Orange -	+24vdc Motor supply voltage

## Coin/Token Sizes

The hoppers will automatically adjust to dispense coins/tokens in size from 20-30 mm in diameter and 1.25 - 3.5 mm in thickness.


There is an option available to dispense smaller coins.

A nickel is approximately 21 mm, a quarter is approximately 25mm. A Susan B. Anthony is 28mm

## Coin Control Hopper MKIV

Three green LED indicators are fitted on the hoppers and are visible in the section where the coins exit the hoppers. From left to right these are designated as follows:

1. Logic power supply on (12 & 24vdc present).
2. Security optical obstruction indicator -. Should be "on" when unit is OK.
3. Output indicator, indicates coin passing photo-sensor. This is the optical sensor the coin will obstruct on its way out of the hoppers. For normal operation LED # 3 will be off until coins are dispensed.

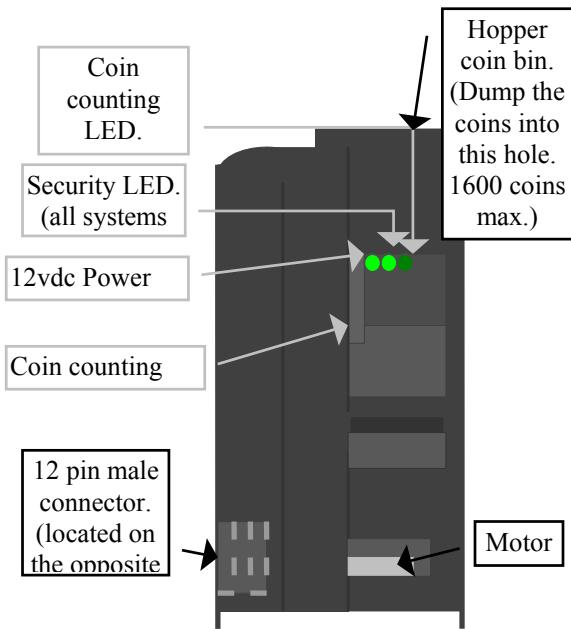


**The right & left hoppers have a removable coin chute installed. Replacement hoppers are not sent with this coin chute.**

**Left chute (P# AC2010-104)**

**Right chute (P# AC2010-114)**

## HOPPER ERROR CODE DEFINITIONS

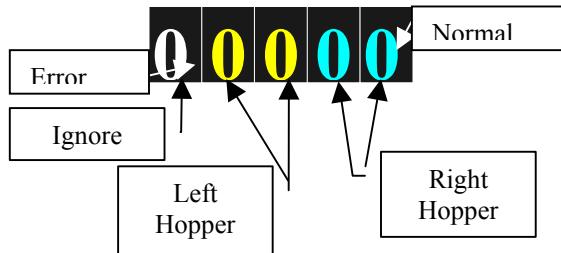

The DBCG-1 EPROM chips allow for the hoppers to run in a one-hopper mode if one hopper goes down and the ability to explain why that hopper was shut down. To access this mode press the DUMP button while in the normal operating mode. The meter display will disappear and be replaced by the error readout. You will know if you are in the one-hopper mode if only one hopper is dispensing coins, one hopper is full and the other is empty, or that your far-left decimal point on the light-up display is lit instead of the far-right. The most left display (#1) is not used. The #2 & #3 display are for the left hopper and #4 & #5 display are for the right hopper. Here are the error code definitions:

**01=Low coin.**

**02=Object stuck in optic window.**

**04=Did not pay enough coins.**

**10=Paid too many coins (2 max) Jackpot protection!**

An error read-out of "00100" states the left hopper was shut down due to low coins. A read-out of "00003" states an optic window failure and low coin was detected. I.e. 01 + 02 = 03.

## Functional Description of the Series AC2000 Changer

*To follow along with this walk-through of your changer, fill the hoppers with coins and turn the changer on.*

1. When power is applied the validator will cycle twice, the out-of-service LED flashes then goes out, the green LED on the main logic board comes on steady, and the decimal point on the main logic board number display will flicker on once per second in the standby mode.
2. During the power-up mode the main logic board relay clicks twice enabling power (120vac) to the validator. When this relay is not enabled it routes 12vdc ground to the out-of-service LED. Without power to the validator the changer cannot accept bills. Since we are not in the error mode, the red LED on the validator logic board is on steady.
3. When a bill is inserted into the validator bill slot, the bill will be pulled inside. The validator then compares what the bill looks like to its memory. After the bill is validated it grounds the 5vdc lines causing a pulse along the yellow and blue validator harness wires to pins 5 and 15 of the main logic board. Each pulse stands for the amount of the denomination validated. (i.e. 1 pulse for \$1, 5 pulses for \$5).
4. The 5vdc pulse then travels from pins 5 and 15 to the EPROM chip (ver. DBCG-1") pin #25. The EPROM sends a 12vdc pulse to the meter chip (U5) out pins #21
5. & 22 (one pulse per denomination validated). The EPROM also multiplies the bill pulse by the DipSwitch settings (The EPROM reads the DipSwitch settings during the power up mode and stores them into memory.)
6. The EPROM then sends the hopper pulses out pin #23 to pins 6 and 7 of the red 12 pin hopper plugs. These pulses travel through the purple and brown wires of the hoppers wire harness to the hoppers pins 8 and 12.
7. The hopper turns itself on with the first hopper pulse. The hoppers counts the hoppers pulses sent from the EPROM chip on IN3 (pin 12) while dispensing the coins at the same time. When the amount of hoppers pulses in equals the coins dispensed through the coin counting optical sensor the hopper turns itself off.
8. The Changer returns to the standby mode with the decimal point flashing once per second until another bill is inserted.

## Functional Descriptions of Out-of-Service Conditions


*Out-of-Service conditions occur for the Series 2000 changer for the following reasons; low coins, hopper fault error, validator fault, or a blown fuse.*

1. **Blown Fuse:** an AC power spike in line voltage or a bad transformer on the main logic board can cause A blown fuse on the main logic board. If either fuse blows the indication is the green LED on the main logic board will not light.
  - A. Replace the fuse. If the green LED now lights then there was a spike.
  - B. If it does not and the fuse blows again the power transformer is shorted. To test the transformer use a voltmeter set for ohms and measure across the primary (40ohms) and the secondary (1.5ohms).
2. **Hopper Fault:** A hopper fault can either be a jammed hopper, a blocked coin counting optic or a bad hopper logic board.
  - A. Indications for a jammed hopper are the changer accepts bills, the meter counts up, but nothing or not enough coins are paid out.
    1. After 2 minutes the EPROM shuts off the validator if the coins are not paid out correctly. The "Empty" LED will flash once per second.

2. At this point the three options open are to attempt repair on your own, call your distributor, or return the defective hopper to American Changer.
- B. Indications for a blocked coin optic or bad hopper logic board are the out-of-service LED on the outside of the changer is lit and the red LED on the main logic board is lit and flickers off once per second.
  1. If two of the 3 green LED's on hopper logic board are lit then the hopper logic board is bad.
  2. If there is a coin or foreign object caught in the coin exit window LED's #1 and #3 will be lit on the hopper logic board instead of LED's #1 and #2.
    - a. Take off the side of the hopper with the 5 Philips screws. Pull up on the exit window logic board and look for the jammed item.
    - b. Ensure you have the pins aligned before reconnecting logic board.
3. **Validator Fault:** When a validator fault occurs the validator's EPROM shuts down the validator and flashes an error code via the red LED on the validator logic board. When there is no error this LED is on steady. The validator only gives bill pulses to the main logic board so the main board never knows if the validator isn't functioning. Therefore the out-of-service-LED will not light. (See page 10 for validator error codes.)
4. **Low Coins:** The low coin condition is probably the most common fault. The EPROM on the main logic board is constantly checking for low coins in the hoppers. This is done with a low current 5vdc signal on pin #3 of the hopper's output connector. The voltage then travels down the hopper's wire harness on the white wire to pin #7 of hopper's plug. The signal is applied to one of the gold low contact plates at the bottom of the hoppers. The 5v travels through the coins through the other contact gold plate to hopper's pin #2. It then goes through the black wire in the hopper's harness to pin #10 on the main logic board. Any interruption of more than 1/2 a second will cause an out-of-service condition.
  - A. Clean the bottom gold plates of the hoppers with steel wool or fine sandpaper. Refill the hoppers and try again.
  - B. Check continuity, (0 ohms) resistance, from pins 3 (white) and 10 (black) of the red hopper harnesses. Make sure both hoppers are full and the changer is turned off.
    1. If the continuity is 0 ohms, replace the main logic board.
  - C. Pull the hoppers out of the changer, then look at the 12 pin black male connector that sticks out of the hoppers. Place the continuity checker's leads on pins 2 & 7.
    1. If the continuity is 0 ohms, replace that hopper's plate or adjust the hopper's plate female socket's pins so that they are not so spread out.
    2. If the continuity is infinity, then replace that hopper.

## VALIDATOR INTERFACES

### 18 PIN INTERFACE CONNECTOR DETAILS

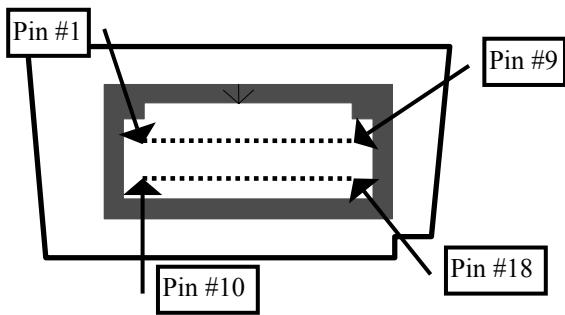

#### Interfacing the Mars 2501/2511 Series with the ValiChanger

##### 8-Position Switch

1	off
2	on
3	off
4	on
5	off
6	on
7	off
8	off

*No change is required to the 18-pin connector..*

Ensure the black & yellow wires go to a wire nut and the green & white go to the other wire nut

#### Interfacing the Mars 2601/2611 Series with the ValiChanger

##### 8-Position Switch

1	on
2	on
3	on
4	on
5	off
6	on
7	off
8	off

*The 18-pin connector is not required.*

#### Interfacing the Mars AL-4 or AL-4 Plus Series with the ValiChanger

8-Position Switch	4-Position Switch
1 on	1 off
2 off	2 off
3 on	3 off
4 on	4 off
5 on	
6 off	
7 off	
8 on	

*The 18-pin connector is not required.*

#### Interfacing the Maka NB-10 with the ValiChanger

To interface the Maka NB-10 validator with the ValiChanger the following settings should be used for the “\$1 = one pulse” configuration. See the validator manual for full details. The 18-pin interface connector should not be used.

#### Interfacing the Maka NB/NBE-20 with the ValiChanger

To interface the Maka NB/NBE-20 validator with the ValiChanger the following settings should be used for the “\$1 = one pulse” configuration. See the validator manual for full details. The DipSwitch settings should be:

##### 6-Position Switch

1	on
2	on
3	off
4	off
5	off
6	off

The 18-pin interface connector supplied with the ValiChanger should have pins 3, 4, 14, 15 & 18 connected and pins 7,9,12 connected.

#### Interfacing the CoinCo BA30SA with the ValiChanger

Connect wires 4 & 12 (Black & Red) to gather on the 18-pin connector to enable the Validator.

#### CoinCo MAGPRO Series Flash Codes

Flash codes 1-18 may appear during normal servicing of the BA30. If more than one error or condition exists, the lower number flash code will appear until its respective error or condition is corrected. The left and right sensors referenced below are given viewing the BA30 from the front.

# of Flashes	Description of Flash Codes
1	Bill box full
2	N/A
3	Check bill path
4	All bill accept switches are off
5	Bill jam or sensor error
6	Stacker motor/home sensor
7	Transport motor/encoder sensor
8	N/A
9	EPROM Has Failed
10	EPROM Has Failed
11	Center Optic Failed
12	Right Optic Failed
13	Left Optic Failed
14	Bill Position Sensor Error
15	Right Bill Position Sensor Error
16	Left Bill Position Sensor Error
17	Lower Anti-Stringing Armature out of place
18	Upper Anti-Stringing Armature out of place

# **MAG** **BILL ACCEPTOR**

Operation and Service Manual



## **COINCO MAG50B VALIDATOR SECTION**


	<b>PAGE</b>
Removing the Bill Box	12
Clearing a bill jam	12
Setting the bill types accepted	13-14
Cleaning the sensors	14-15
Cleaning a salted unit	15
Replacing the belts	16



## Removing the bill box.

To remove the 1000 bill stacker from the CoinCo validator follow the picture below.


Figure 4

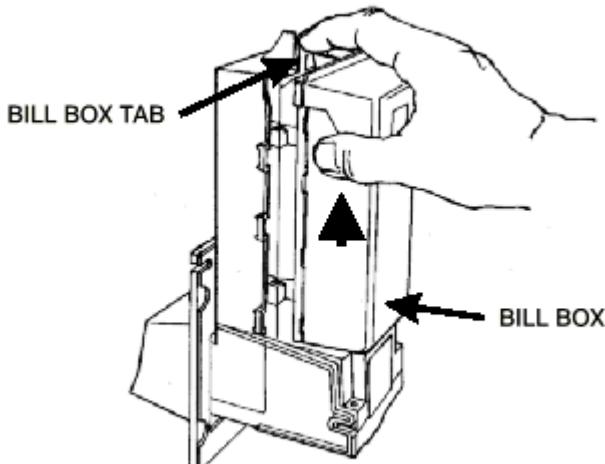

## REMOVING A BILL JAM

From time to time a foreign object or ripped bill will become caught in the validator. Follow the picture below to remove the item.

Figure 6

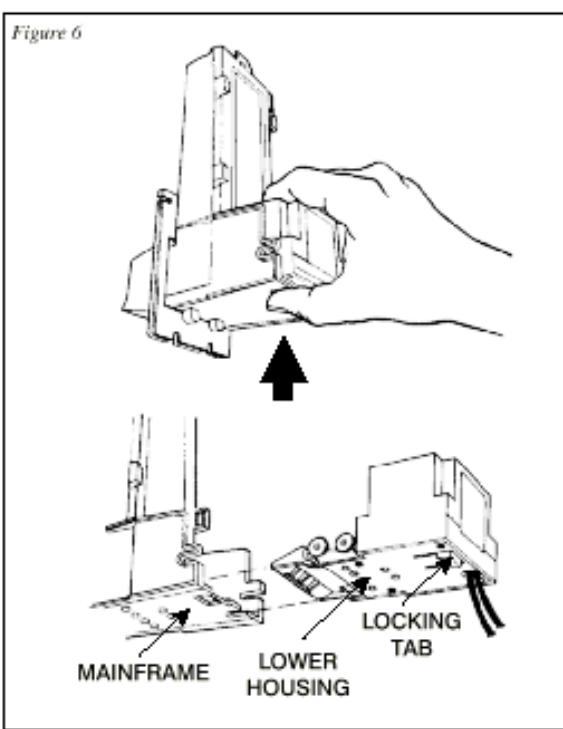

## SETTING THE BILL ACCEPT DIP SWITCHES

Figure 1



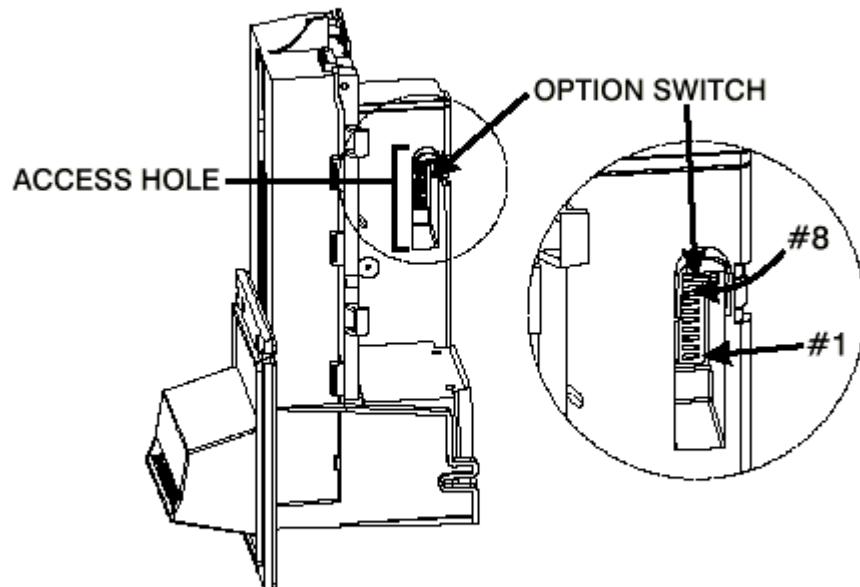


Figure 5

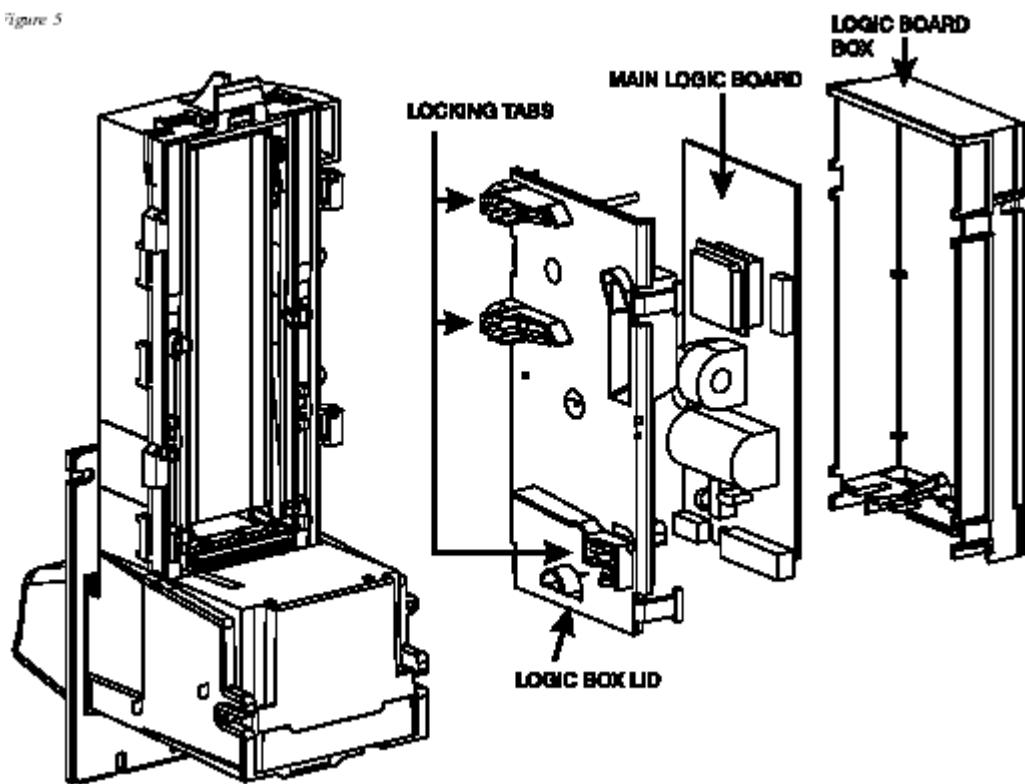


SWITCH	ON	OFF
1	High Security	Standard Acceptance
2	Accepts bills in one directions only (face up, green seal first)	Accepts bills in both directions (face up)
3	Standard credit pulse 150ms on 150ms off	Short credit pulse 50 ms on 50 ms off
4	\$20 Accept	\$20 Reject
5	\$10 Accept	\$10 Reject
6	\$5 Accept	\$5 Reject
7	\$2 Accept	\$2 Reject
8	\$1 Accept	\$1 Reject

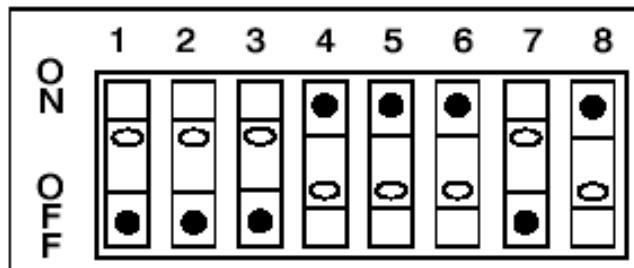

## CLEANING THE BILL VALIDATOR

Refer to the pictures and the procedure on the next page to clean the bill validator every 4-6 months.

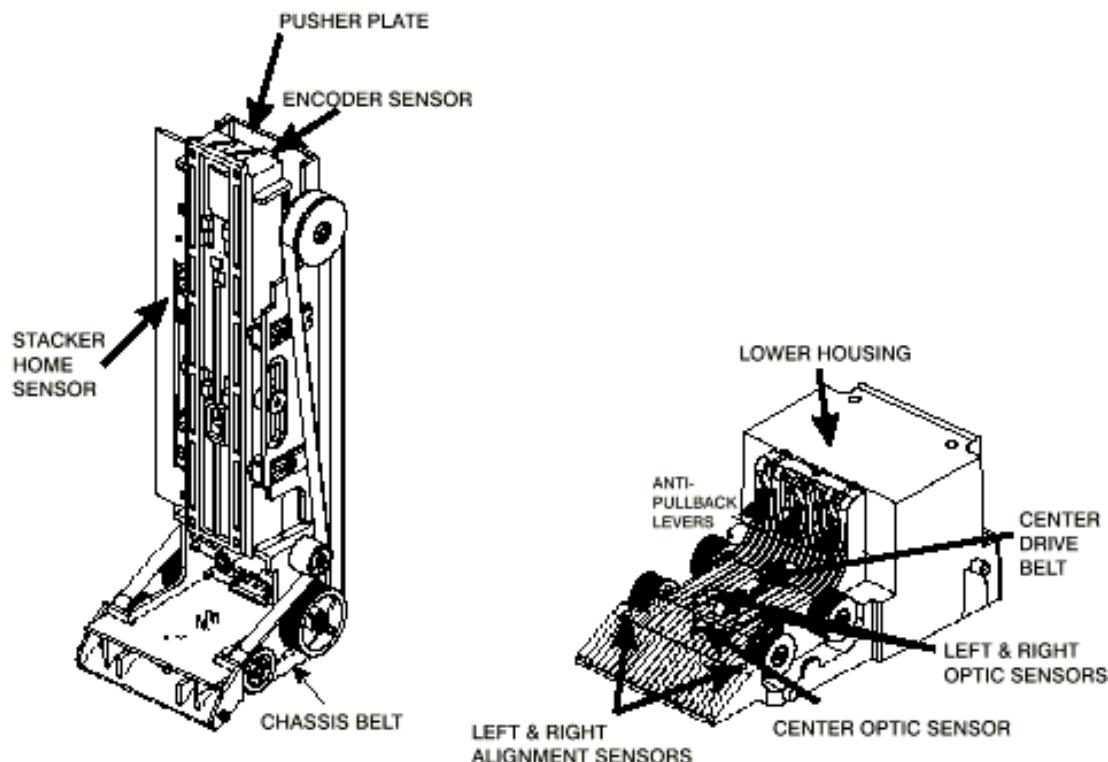

**MAGPRO CLEANING: IF ANY OF THESE PROCEDURES ARE PERFORMED TO YOUR VALIDATOR AFTER IT IS RETURNED UNDER A WARRANTY REPLACEMENT, YOU WILL BE SUBJECT TO A \$65.00 LABOR FEE.**

CLEANING AND MAINTENANCE:

**Note:** Petroleum-based cleaners and freon-based propellants can damage plastic and some electronic components. Scouring pads and stiff brushes may harm the protective conformal coating on the circuit boards and can mar the plastic. These items should never be used when cleaning the MAGPRO bill acceptor.

**The MAGPRO should be cleaned every 7,000 bills or every 4 -6 months (or as needed, depending on the environmental conditions of the location). Dust can be removed with a soft brush or cloth or it can be blown out using compressed air.**

**Procedure:**

1. Disconnect power from the bill acceptor.
2. Remove the bill box and use a soft cloth to wipe the dust from around the intermediate frame and stacker plate.
3. Remove the lower track.
4. Using compressed air or a soft brush, blow or brush the dust off of the optic sensors and out of the recessed sensor openings.
5. Remove dust from around the belts and wheels on the lower housing and the sensors on the upper sensor board. The upper sensors are located directly above the lower housing sensor when the lower housing is installed.
6. The bill path can be cleaned to remove further dirt and oil using a soft cloth moistened with a mild soap and water solution.
7. Clean the magnetic head using a swab and isopropyl alcohol.
8. Once the lower housing is dry, place it back into the mainframe so that the tab on the bottom locks into place.
9. Blow the dust out of the encoder wheel and its sensors. (It may be necessary to extend the stacker plate to access the encoder wheel. Supplying power to the unit momentarily can do this, so that the stacker plate extends.)
10. Remove dust from the transport belt areas and from any other places of build up.
11. Remount the bill box.
12. Apply power and insert bills to verify that the unit is functions property.

**MAGPRO CLEANING PROCEDURE FOR SALT WATER POLLUTED UNITS:**

**Note:** Petroleum-based cleaners and freon-based propellants can damage plastic and some electronic components. Scouring pads and stiff brushes may harm the protective conformal coating on the circuit boards and can mar the plastic. These items should never be used when cleaning the BA30 bill acceptor.

**Procedure:**

1. Remove power from the bill acceptor.
2. Remove the bill acceptor from the vending machine.
3. Open the bill box lid and verify that the stacker plate is in the stand-by/home position. If it is not in the home position, apply power and observe that the stacker plate returns home.

**Warning:** If moisture is present, allow the unit to dry thoroughly before applying power to avoid possible shock hazard. If the stacker plate does not return to the home position, remove power and carefully remove the bill box to avoid damaging the bill box and/or stacker plate.

4. Remove the lower housing.

5. Remove the bottom cover from the lower housing.
6. Run hot water (1101/4-1401/4F) over the lower housing from the top and bottom. Using a soft brush, gently clean any residual salt. Use a soft absorbent cloth to clean any residue off the lower housing. If the transformer gets wet, allow the unit to dry for 24 hours before applying power.
7. Remove the front mask. Using hot water and a soft brush, clean the front mask, upper sensor board, main frame anti-pullback levers and position sensor mount.

*Caution: The motors are not protected from water, therefore the unit must be held in a manner that prevents water from running over the intermediate frame crossbar.*

8. Remove the position sensor cover on the crossbar and carefully lift the LED from its mount. (Early models only.)

*Caution: Protective coating on the LED leads should not be damaged. Clean all salt residue from the mount, sensor hole and detector area.*

*The detector can be seen through the sensor hole, and is located in the chassis. Replace the position sensor cover. (Early models only.)*

9. Verify that the anti-pullback levers move freely and that the spring returns them to their open position.
10. Allow the unit to dry thoroughly.
11. Clean the magnetic head using a swab and isopropyl alcohol.
12. Replace the front mask
13. Replace the lower housing cover.
14. Replace the lower housing into the main frame.
15. Remount the bill box.
16. Apply power and insert bills to verify that the unit is functioning properly.


**6 OR 7 ERROR CODE FLASHES**

*The cleaning procedure for this common occurrence is listed below. Just follow these steps.*

1. If this code has occurred on a new machine or one that the validators DIP switches were just changed, Ensure that all the white plugs on the side of the validator board away from the red LED are plugged in securely.
2. Remove the bill box.
3. Turn the Changer ON then OFF in an attempt to stop the metal push plate so that it COASTS into the fully outward position.
4. Using an air compressor or a can of compressed air blow out the area behind the push plate until it is completely free of all dust and lint.
5. Turn the changer power back on so that the push plate returns to the inward position. If the same error code persists, repeat steps 1 - 3 concentrating on the top center area behind the plate.
6. Replace the bill box.

## REPLACING THE BELTS

Every 2-3 years the belts on the CoinCo will wear out. To replace them, remove the validator components down to the picture show. Refer to the parts diagram at the end of the manual for help getting to this point.

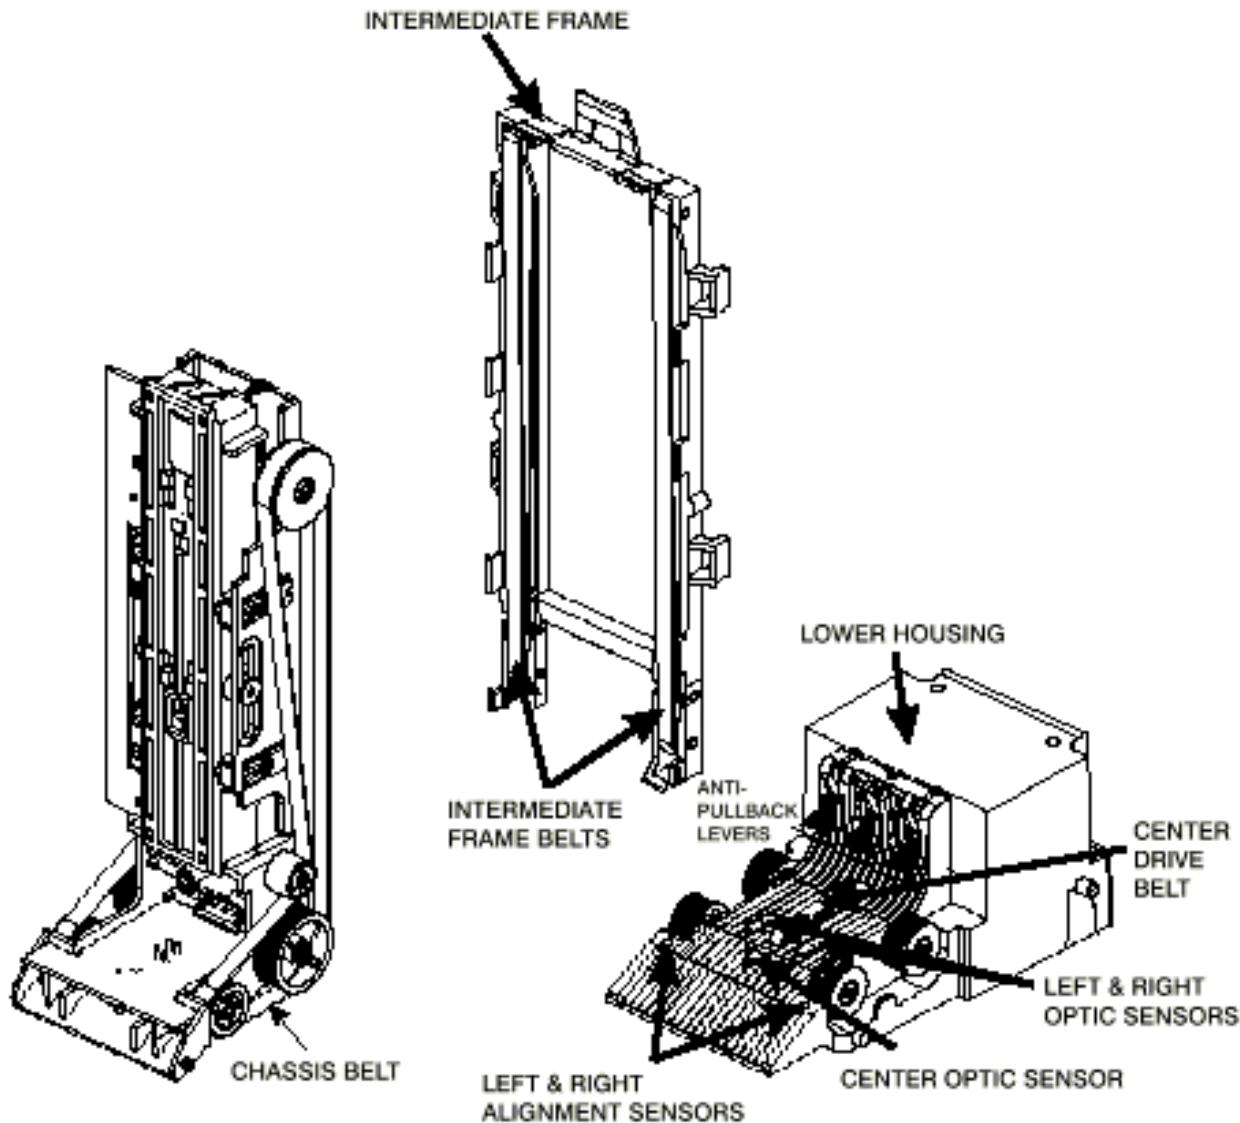

# **MARS AE2601**




## **MEI MARS AE2601 VALIDATOR SECTION**

	<b>PAGE</b>
Removing the Bill Box	18
Clearing a bill jam	18
Setting the bill types accepted	19
Cleaning the Validator	20
Coupon Programming (Dip Switch)	21-22
Trouble Shooting & Trouble Codes	23


**BILL ACCEPTOR  
120VAC \$1-\$20**

!

## Removing the bill box

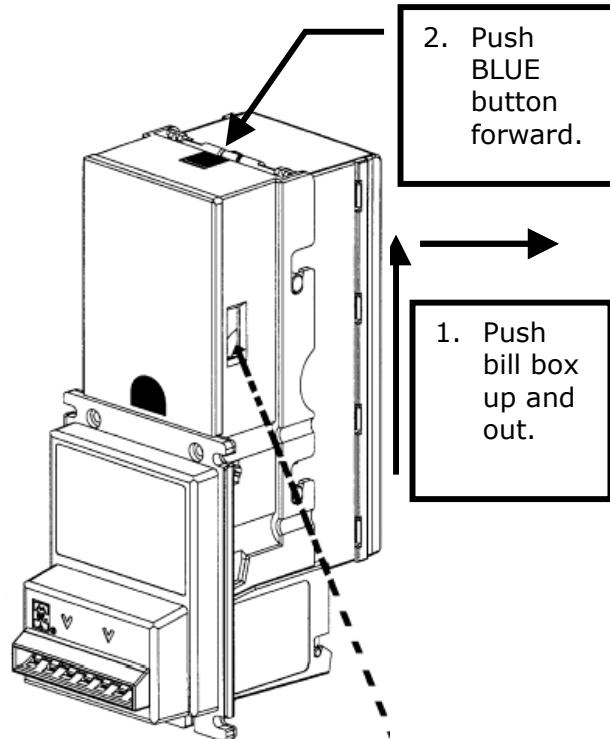

## Clearing A Bill Jam

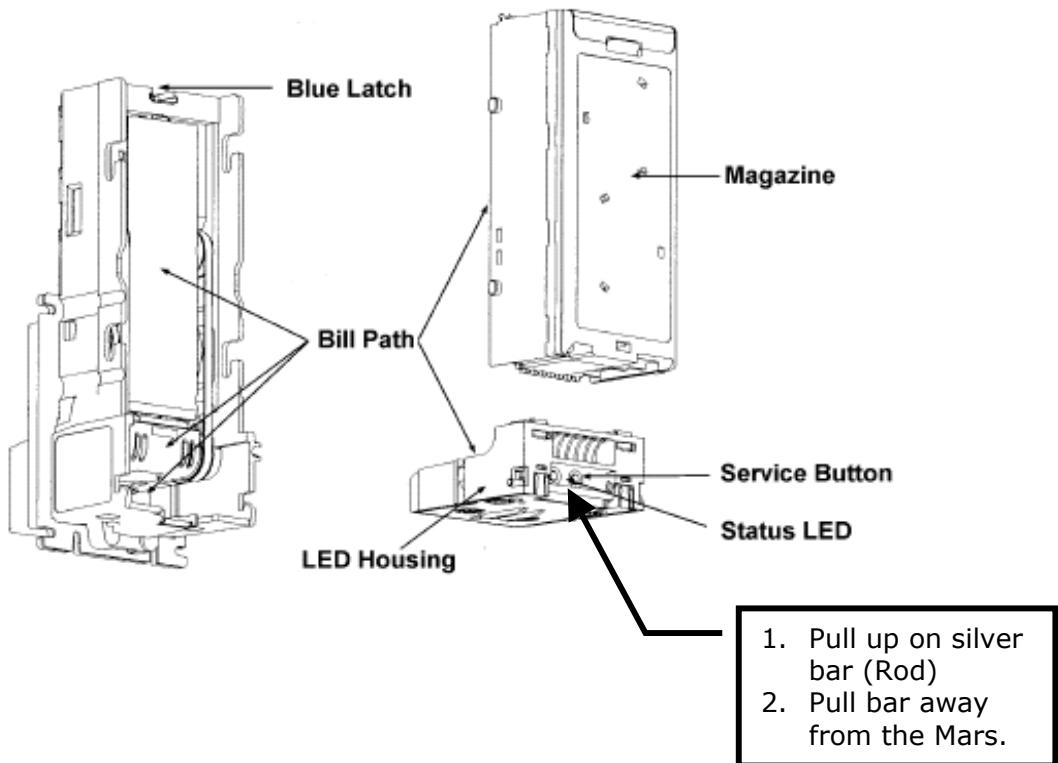

## Setting the Dip Switches

			Factory Default
Switch 1	Switch 2		
ON	OFF	1 Way Bill Acceptance	
OFF	ON	2 Way Bill Acceptance	
ON	ON	4 Way Bill Acceptance	X
Switch 3*			
OFF	High Security		X
ON	High Acceptance		
Switch 4			
ON	Rejects \$ 2 Bills		X
OFF	Accepts \$ 2 Bills		
Switch 5			
ON	Rejects \$20 Bills		
OFF	Accepts \$20 Bills		X
Switch 6			
ON	Always Enable		X
OFF	Harness Enable		
Switch 7			
ON	4 Pulse Per Dollar		
OFF	1 Pulse Per Dollar		X
Switch 8**			
ON	Vending Interfaces		
OFF	Gaming Interfaces		X

\* Switch 3 affects all denominations. See Coupon Configuration on page xx for individual acceptance/security enabling options.

\*\* The AE2600 defaults to short pulse.




## Cleaning & Maintenance

### Cleaning

You can clean the bill acceptor while it is still mounted in the machine.

1. Remove power from the machine.
2. Unlatch the magazine by pushing the blue latch (located on the top of the unit) toward the front of the unit.
3. Unhook and remove the magazine by holding the latch and lifting up and then back on the magazine.
4. Unlatch the LED Housing by lifting up on the metal bar (located below the Status LED).
5. Remove the LED Housing by holding the metal bar and pulling back on the LED Housing.
6. Clean the bill path with a soft cloth. You may use mild, non-abrasive, non-petroleum based cleaners if sprayed on the cloth.

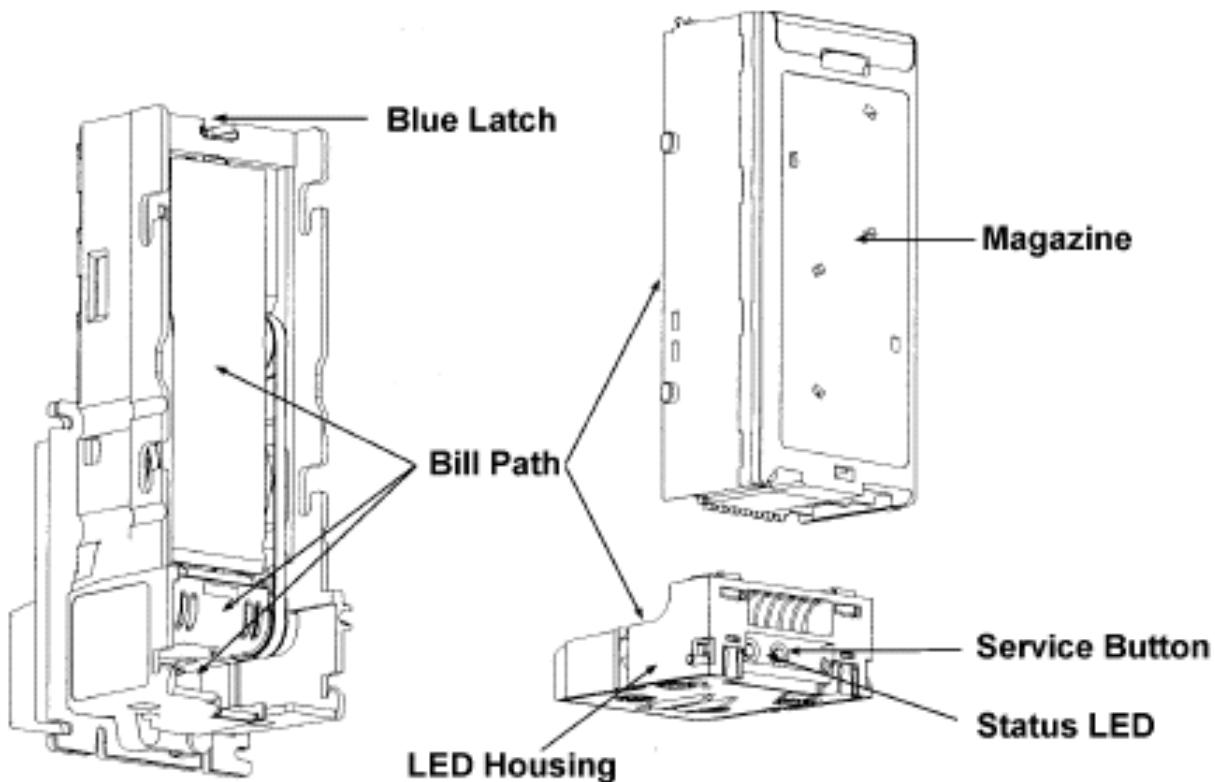

## Coupon Configuration

The AE2601 may be configured using a coupon. The coupon is included in the AE2601 Series Installation Guide. Carefully cut the coupon along

the dotted-line edge to remove it from the installation guide. Copies of the original coupon may be produced with a standard, carbon-based, non-color copier. Cut copies to match the size of the original coupon.

**All option switches must be in the OFF position for the coupon selections to be active.**

The coupon selection will remain with the AE2601 until the unit is reprogrammed, even if power is removed.

When filling out the coupon, note the following:  
Use only a #2 pencil to fill in the blocks

Fill in the entire block

Do not mark the coupon outside the blocks or on the back of the coupon

Fill in ONE block for EVERY line

## Coupon Programming

1. Fill out the coupon using the table below.
2. Locate the service button on the back of the unit (refer to Figure 2).
3. Press the button once to enter the coupon setup mode. Pressing again will exit the mode. The unit will automatically exit coupon setup mode upon acceptance of the coupon configuration.

The LED Status indicator (located to the left of the service button) will flash rapidly indicating that the unit is in coupon setup mode.

4. Insert the coupon marked-side up.

The AE2601 will pull the coupon in, read it, and then return it to the user.



A good coupon will be returned immediately.

After the coupon is pulled from the bill acceptor mouth, the unit will flash the Status LED ten times to confirm a good configuration.

A bad coupon will be held for ten seconds before being returned. This delay is to make you aware that there is a problem with the coupon. When the coupon is pulled from the bill acceptor mouth, the unit will flash the Status LED the number of times corresponding to the section of the coupon wherein a problem lies. For example, if

**THIS IS NOT A USABLE COUPON!  
DO NOT COPY!!!**

**FIGURE 1**

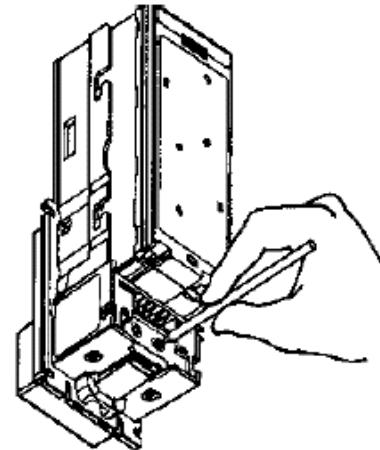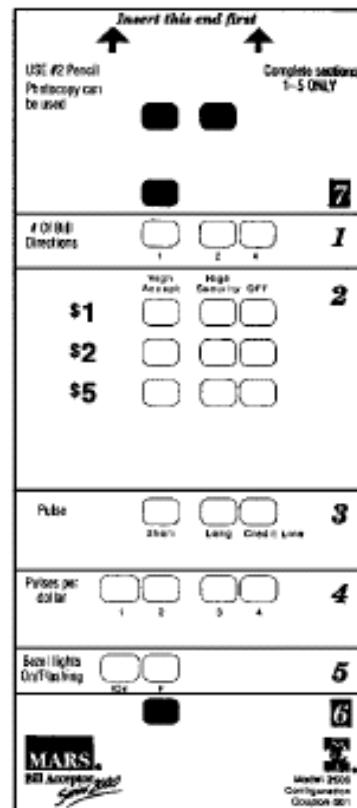

**FIGURE 2**

the problem is in section five, the LED will flash five times. Section numbers are located to the far right of each section on the coupon.

5. If the configuration is rejected, check the coupon and repeat the process.

Signal	Meaning	Solution
LED ON	Indicates that the unit is enabled and ready to accept a bill.	No action necessary.
LED OFF	Indicates that no power has been applied to the unit.	Check to ensure that power is applied.
1 Flash	Indicates that something is obstructing the bill path.	Remove the magazine and LED housing; inspect for foreign material.
2 Flashes	Indicates that the unit is not enabled.	Verify configuration. Check the coin tube levels in the coin changer. Check the option switches in the coin changer. Note: Many machines disable the bill acceptor if the machine door is open and the door switch is not activated or if the machine is out of product.
3 Flashes	Indicates that the bill path needs cleaning for optimum performance.	Remove the magazine and LED housing and follow cleaning instructions (page 22) to clean the bill path.
4 Flashes	Indicates that something is obstructing the bill path.	Remove the LED housing and look at the bill path on the housing and inside the unit for foreign material; clean as necessary.
5 Flashes	Indicates that the magazine is removed (the unit will not accept without the magazine attached).	Reinstall the magazine.
Continuous Slow	Unit is defective.	Replace the unit.
Continuous Fast	The magazine is full of money.	Remove the money from the magazine.

## Trouble Codes

### Status LED

A Status LED provides assistance in diagnosing the condition of the Series AE2600. The following is a description of the LED codes, their meanings, and suggested remedial actions.

**LED ON** - Indicates that the unit is enabled and ready to accept a bill.

*No action is necessary.*

**LED OFF** - Indicates that no power has been applied to the unit.

*Check to ensure that power is applied.*

**1 Flash** - Indicates that something is obstructing the bill path.

*Remove the magazine and LED housing. Inspect for foreign material.*

**2 Flashes** - Indicates that the unit is not enabled.

*Verify configuration. Check the dipswitches.*

**3 Flashes** - Indicates that the bill path needs cleaning for optimum performance.  
*Remove the magazine and LED housing and follow cleaning instructions (page 29) to clean the bill path.*


**4 Flashes** - Indicates that something is obstructing the bill path.  
*Remove the LED housing and look at the bill path on the housing and inside the unit for foreign material; clean as necessary.*

**5 Flashes** - Indicates that the magazine is removed (the unit will not accept without the magazine attached).  
*Reinstall the magazine.*

**Continuous Slow** - Unit is defective.  
*Replace the unit.*

**Continuous Fast** - The magazine is full of money.  
*Remove the money from the magazine.*

# MKIV UNIVERSAL HOPPER

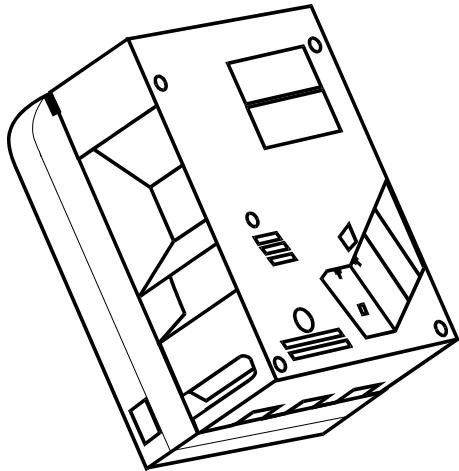

## SERVICE MANUAL

	<b>INDEX</b>	<b>PAGE</b>
1. Coin box removal & reassemble		24-26
2. Exit window replacement		25
3. Logic board replacement		25
4. End plate removal		26
5. Track plate removal		26
5a. Track plate assembly		27
5b. Track plate replacement		28
5c. Final drive gear replacement		28
6. Gearbox assembly		29
7. Motor replacement		29


To un-jam the hopper, refer to sections 4 – 5b, pages 26 – 28.

## 1. COIN BOX REMOVAL

1. Place the hopper in front of you as shown, (looking at the outside of the 'coin box').


Refer to FIG 1.

2. Remove the 2 locking nuts, which hold the 'low level sense plate' wires to the studs.
3. Remove the crimp & wire from the studs.

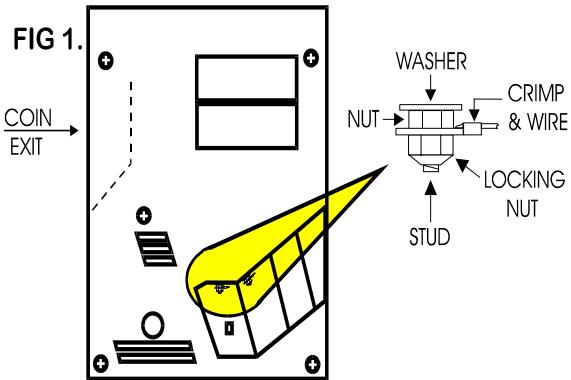

Refer to FIG 1a.

4. Remove the 5 screws indicated (B), which hold the 'coin box' to the 'center plate'.

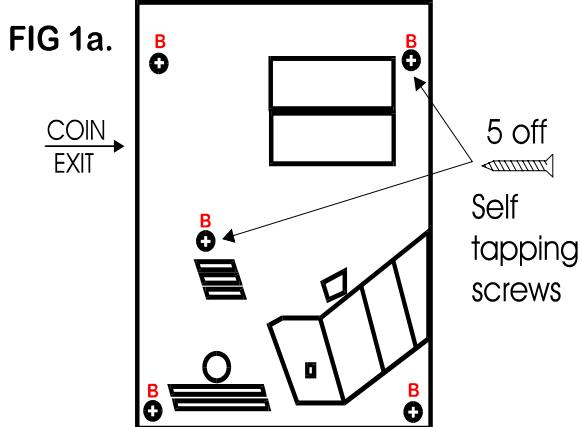


Refer to FIG 1b.

6. Gently lift the 'coin box' away from the rest of the hopper.
7. As the 'coin box' is being removed, carefully slide the 'logic board' out. The stirrer may stay with the 'coin box' or fall onto the center plate.

**NOTE:- The 'logic board' & 'stirrer' are located in the 'coin box'.**

FIG 1b.


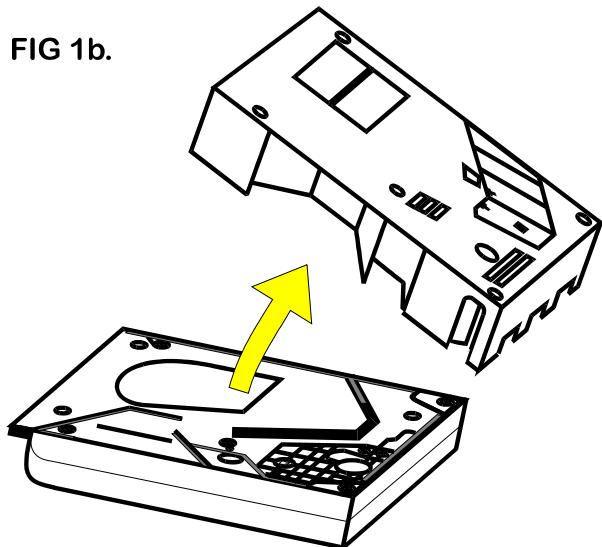


ACCESS IS NOW AVAILABLE TO THE 'LOW LEVEL' SENSE PLATES, THE MAIN PCB, THE EXIT WINDOW, THE MOTOR TERMINALS & PART OF THE WIRING LOOM.

### 1a. COIN BOX ASSEMBLY

1. Firstly, locate the 'stirrer' in the 'coin box' as shown in FIG 12.


FIG 12.

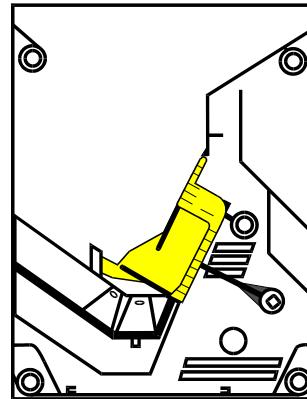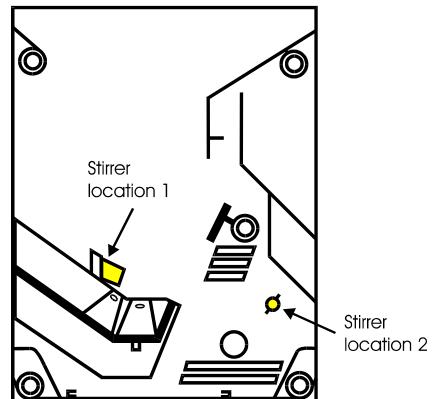

## COIN BOX ASSEMBLY (cont.)

2. Line up the 'centre plate' & 'coin box' as shown below.  
FIG 12a.
3. Route the ribbon cable as shown below.
4. Fit the 'logic board' into slots shown below.
5. Feed the level sense wires through the slot shown below.

FIG 12a

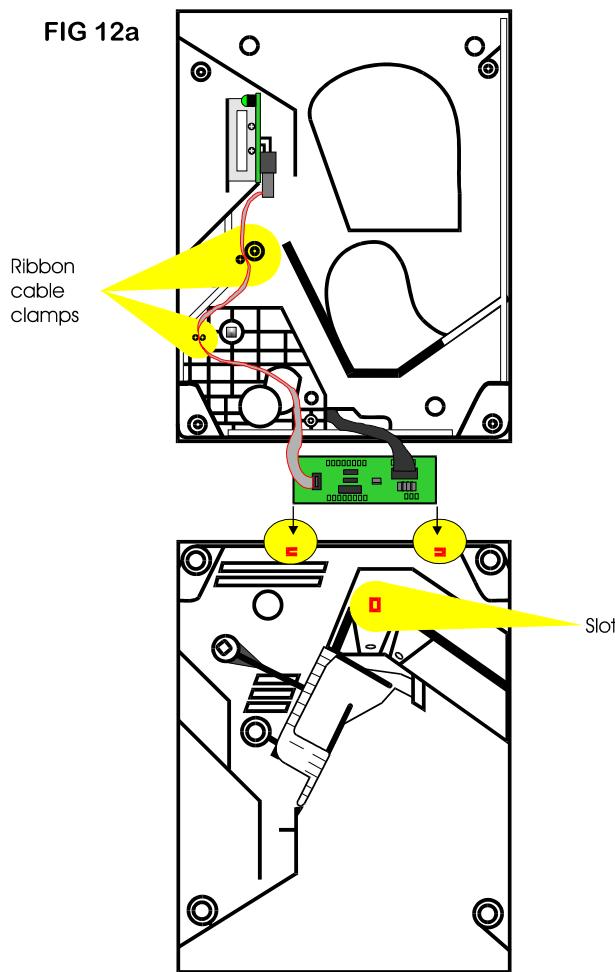

6. Lift the 'centre plate' to meet the 'coin box'. FIG 12b & c.

FIG 12b

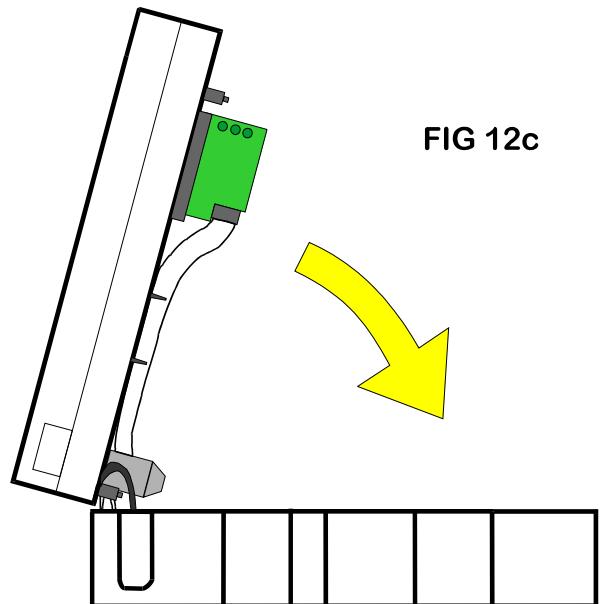
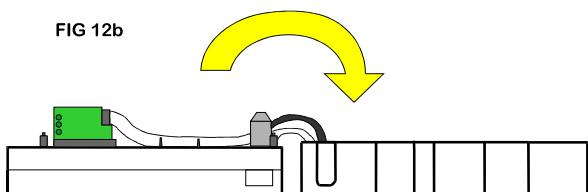



FIG 12c

7. Align the 'center plate' & 'coin box' & push together.
8. Turn the hopper over & refit the screws.
9. Refit the level sense wires.

## 2. EXIT WINDOW REPLACEMENT

1. First, remove the 'coin box', section 1.  
**This will then enable access to the 'exit window'**
2. Unscrew & remove the 2 fixing screws. FIG 4.
3. Remove the 'exit window' from the 'center plate'.
4. Unclip & remove the 10-way ribbon cable header.

FIG 4.

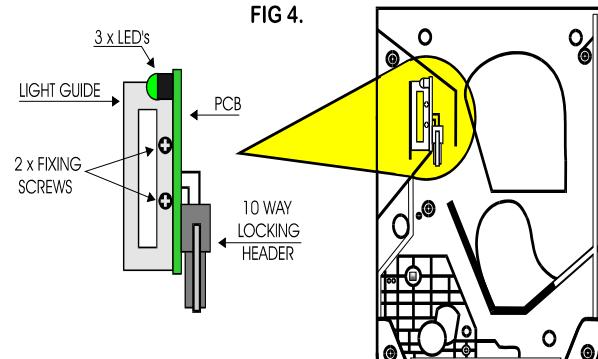


5. To re-assemble, follow the above steps in reverse.

### 3. LOGIC BOARD REPLACEMENT

1. First, remove the 'coin box', section 1.

*This will then enable access to the 'logic board'.*

**FIG 5.**

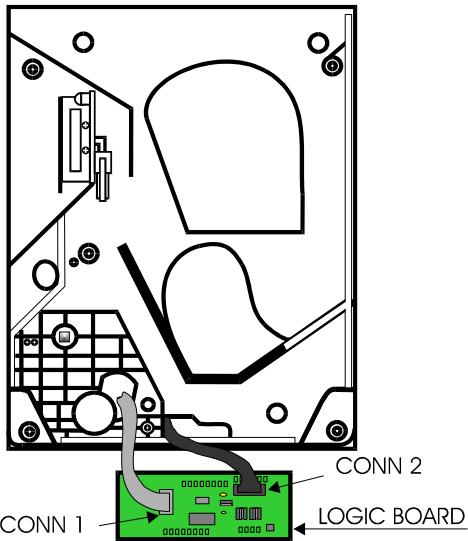

10-way ribbon IDC socket (CONN 1).


2. Move the two ejector arms at right angles to & away from the connector, if fitted.
3. This should release the socket from the header.
4. Clasping the connector between thumb & forefinger, pull away from pin header.
5. Gently, unclip the "friction lock" from the connector housing.
6. Clasping the connector between thumb & forefinger, pull away from pin header.
7. The Logic Board is now released.
8. To re-assemble, follow the above steps in reverse.

### 4. END PLATE REMOVAL

1. Place the hopper in front of you as shown, (looking at the outside of the 'end plate').

Refer to FIG 6.

2. Remove the 9 screws indicated (B), which hold the 'end plate' to the 'center plate'.
3. Locate the position of the 'connector blanking piece'.
4. Holding the 'connector blanking plate' gently lift the 'end plate' away from the rest of the hopper.

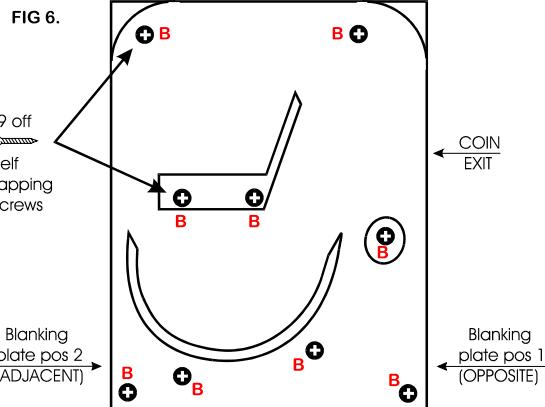


5. To re-assemble, follow the above steps in reverse.

### 5. TRACK PLATE REMOVAL

1. 1. First, remove the 'end plate', section 6.


See FIG 7.

2. The 'elevator track' & 'final drive gear' can now be removed by lifting up & away from the 'center plate'.

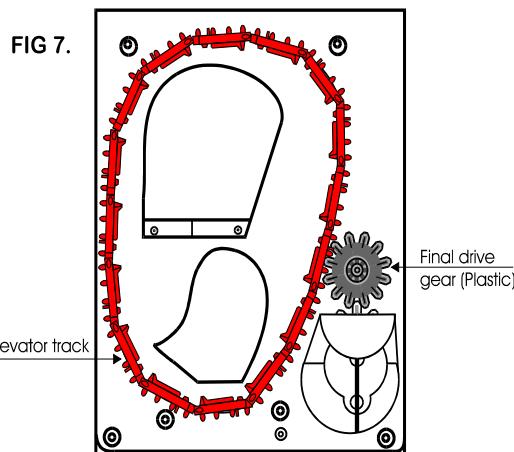


## 5a. TRACK PLATE ASSEMBLY

The following 3 sketches show how to take the 'track plate' apart.

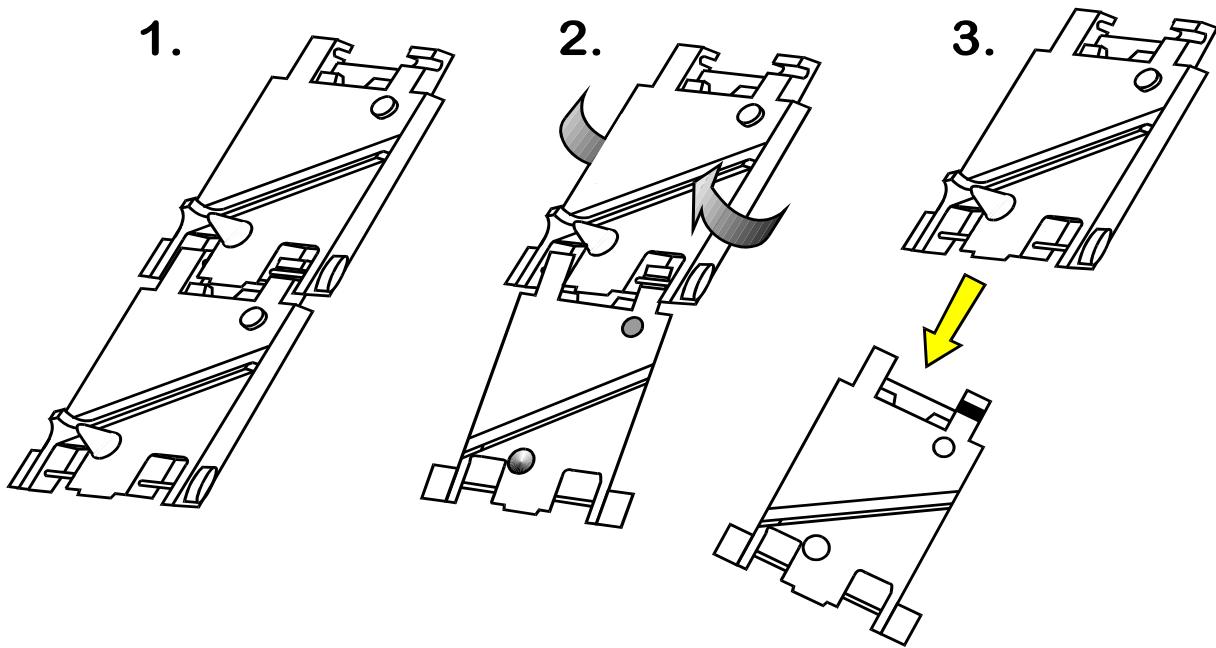


The following 3 sketches show how to assemble the 'track plate'

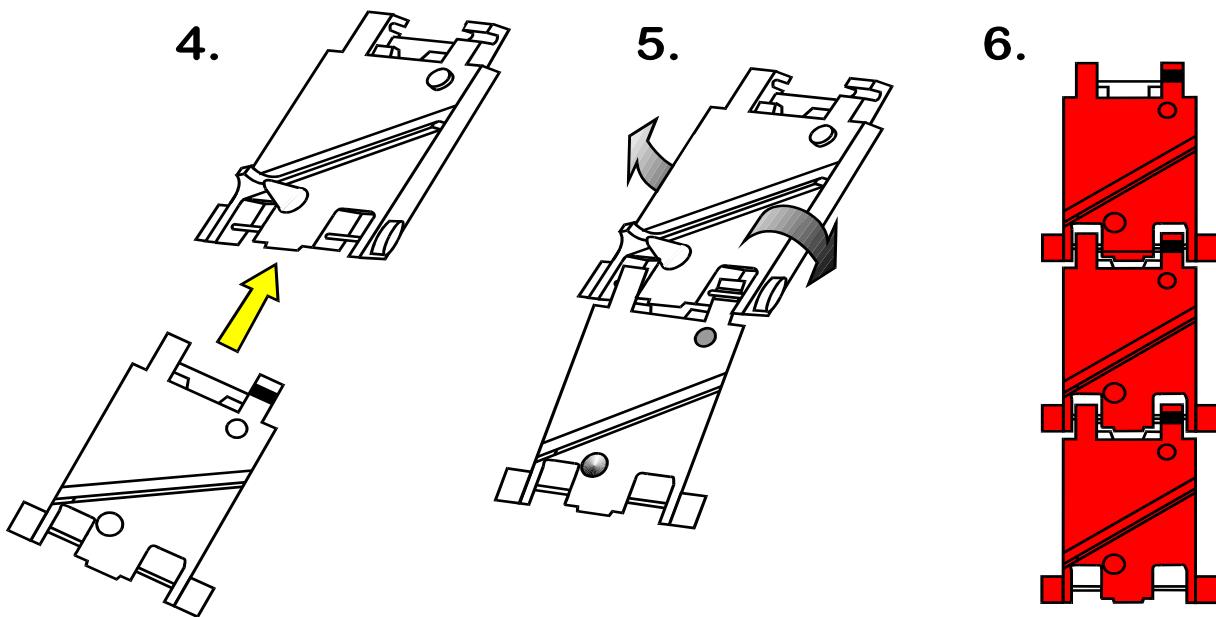

## 5b. TRACK PLATE REPLACEMENT

1. The gray shaded area, in FIG 7b, is the 'track plate' guide path.

FIG 7b.

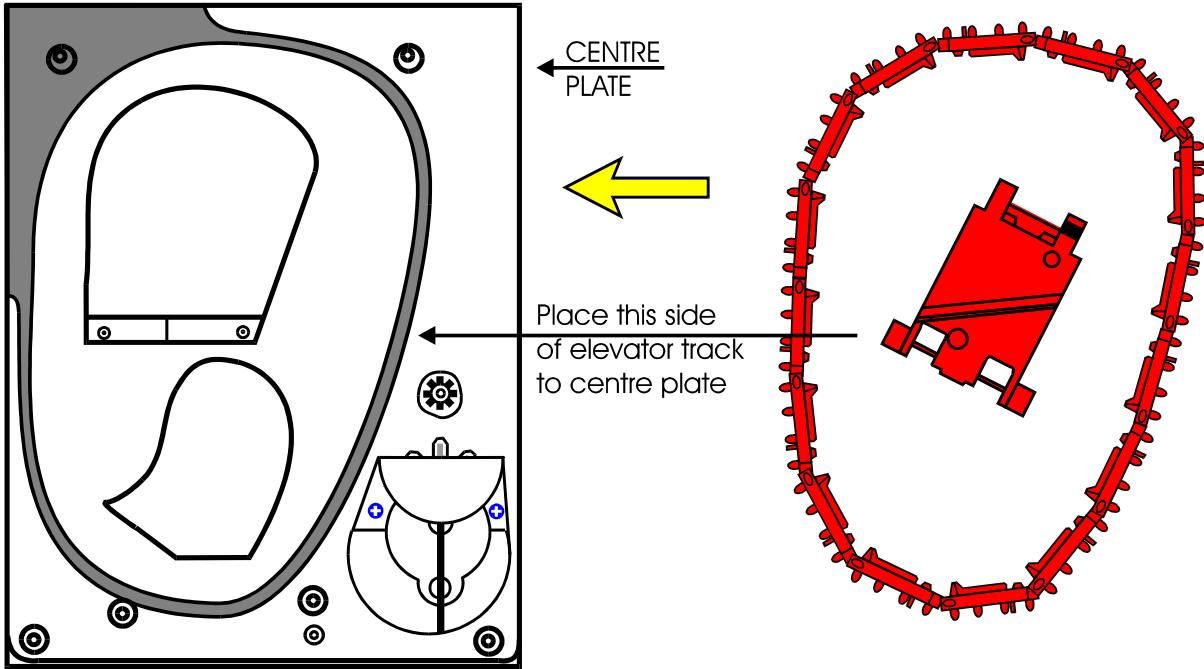


2. Once the 'track plate' is in position, turn the track through  $720^0$  to ensure it is seated in the guide path correctly.

## 5c. FINAL DRIVE GEAR REPLACEMENT

1. Once the 'elevator track' is in place, the 'final drive gear' can be fitted by placing the gear over its mounting spindle, while lining the teeth up with the secondary drive gear, adjust the 'elevator track' so that the gear falls into place. FIG 7c.
2. The end plate can now be re-fitted. See section 6.

FIG 7c.

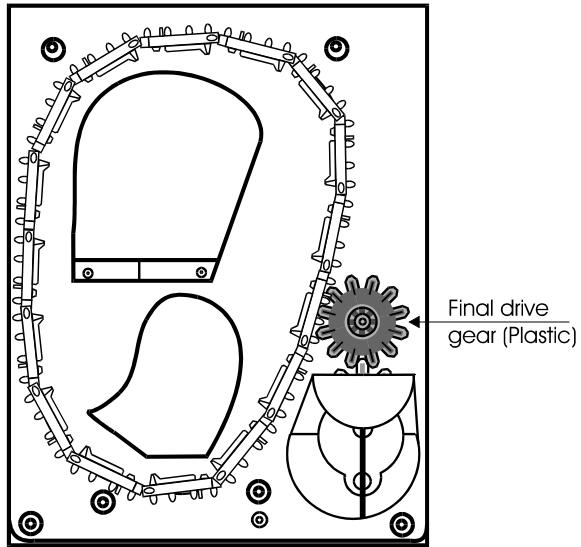

## 6. GEAR BOX ASSEMBLY

1. Remove the end plate. Section 6.
2. Remove the 'elevator track' & 'final drive gear'. Section 7.


3. Remove the gearbox cover. Section 8.

4. Remove the gears in the order as shown in FIG 9.

**Access to the motor fixing screws is now possible.**

5. To re-assemble, follow the above steps in reverse.

**FIG 9.**

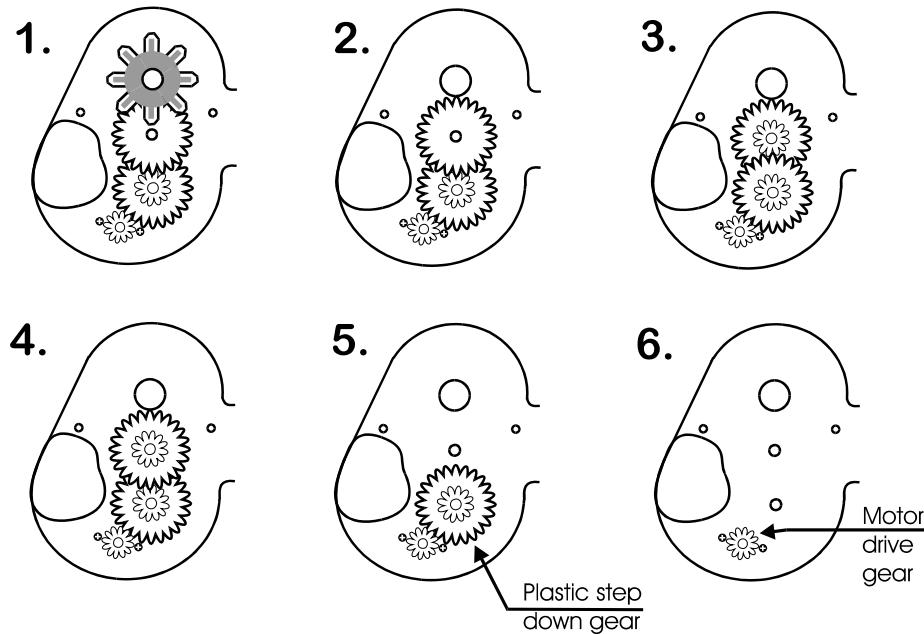

## 7. MOTOR REPLACEMENT

1. Remove the 'coin box'. Section 1.
2. Unsolder the red & black wires from the motor.
3. Remove the 'end plate'. Section 6.

**NOTE: The black wire connects to the terminal marked with a RED dot.**

4. Remove the 'track plate' & final drive gear. Section 7.


5. Remove the gearbox cover. Section 8.

6. Disassemble the gearbox. Section 9.

7. Unscrew the 2 motor fixing screws. FIG 10.


8. To re-assemble, follow the above steps in reverse

**FIG 10**

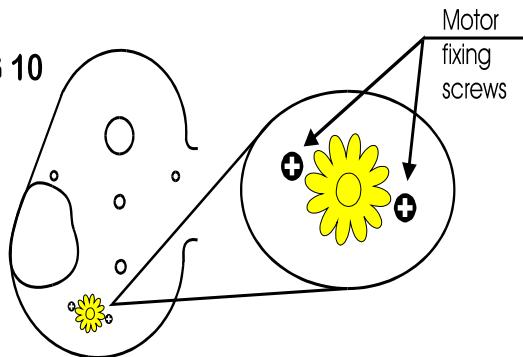

# TECHNICAL FLOW DIAGRAM FOR THE AC2005

**NOTE: Before starting this procedure ensure the changer is plugged in, the ON/OFF switch is on, the hoppers are full of coins, and all wire harnesses are connected securely and correctly. The wires exiting the red connectors should point away from the board!!**

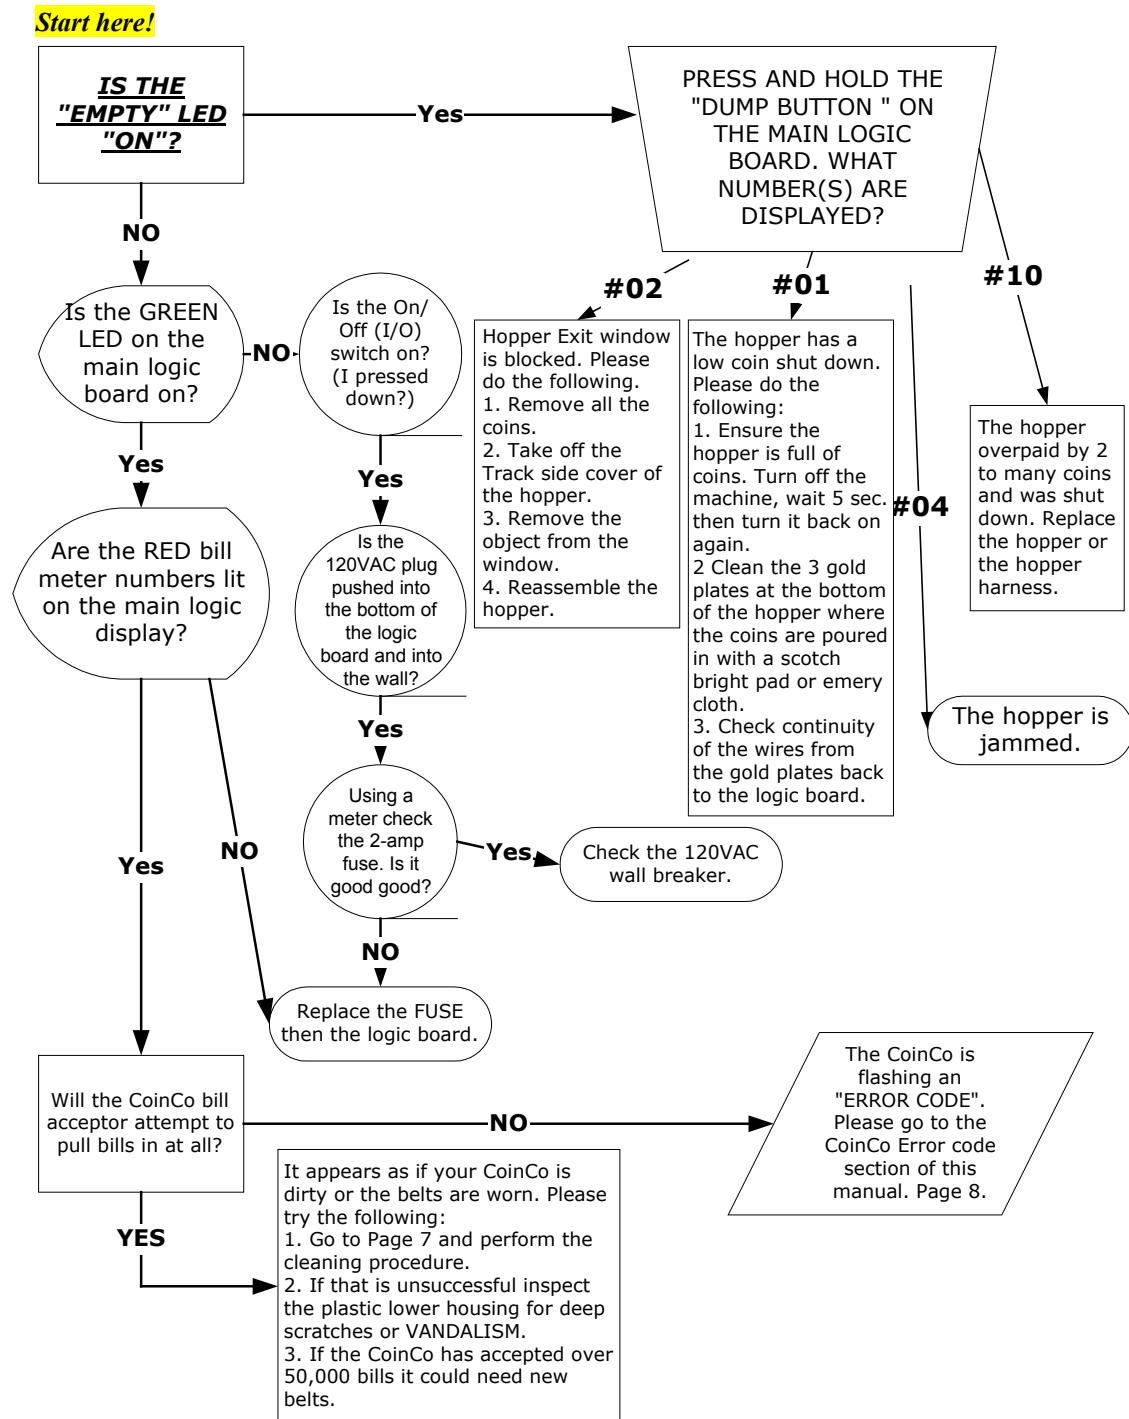

For a more detailed trouble shooting information proceed to the next section!

**FOR TECHNICAL SERVICE OR TO OBTAIN A RETURN AUTHORIZATION  
NUMBER CALL (888) 741-9840**

**ANY REPAIR RETURNED WITHOUT A RETURN AUTH. # WILL BE REFUSED!!**

## TROUBLESHOOTING GUIDE

TO USE THE TROUBLESHOOTING GUIDE, MATCH UP THE PROBLEM, THEN FOLLOW THE SOLUTION SUGGESTIONS. After every step re-try operating the changer to see if the problem has been solved.


<b>Problem:</b>	<b>Solution:</b>
<b>A. The changer is completely dead. (The green LED on the main logic board is not lit.)</b>	<ol style="list-style-type: none"> <li>1. Ensure the changer is plugged in.</li> <li>2. Ensure the on/off switch is rocked to the (1) position (down).</li> <li>3. Unplug the female end of the line cord from the main logic board AC connector and plug it in again tightly.</li> <li>4. Measure the AC voltage at the outlet or check the breaker/fuse box. You can also plug another item into the AC wall outlet to ensure there is power present at the outlet.</li> <li>5. Inspect the AC line cord for cuts or abrasions.</li> <li>6. Check both fuses on the Main Logic Board.</li> <li>7. Replace the main logic board.</li> <li>8. Replace the line cord.</li> </ol>
<b>B. The “Empty LED is lit. BOTH HOPPERS ARE OUT OF SERVICE.</b>	<ol style="list-style-type: none"> <li>1. Ensure the hoppers are not out of coins. (There should be enough coins in the hoppers to cover the gold low level contact plates approximately \$30-\$40. These plates are located at the bottom of the hoppers where you pour the coins.)</li> <li>2. Check the hoppers wire harness that extends from the back of the plate that the hoppers slide in and out on for chipped pieces or other damage. (Pay close attention to pins # 2 &amp; 7.)</li> <li>3. Clean the gold contact plates with steel wool.</li> <li>4. Perform the following steps: <ol style="list-style-type: none"> <li>A. Turn the changer off.</li> <li>B. Ensure the left hopper plate red connector on the left side of the main logic board (MLB) is plugged into the bottom connector, and the right is plugged into the top connector.</li> <li>C. On the MLB slide all the dipswitches left to the “off” position.</li> <li>D. On the left DipSwitch slide #3 “ON” enabling a 4 coin per dollar payout.</li> <li>E. On the right Dip switch slide #8 “ON” disabling the top hopper connector and enabling the changer into the “One Hopper Mode”</li> <li>F. Turn the changer on.</li> <li>G. If the “Empty” LED on the front of the changer is now off, remove the right hopper and service this hopper. The changer will function in this mode until the hopper is fixed.</li> <li>H. If the “Empty” LED is still “on”, turn the changer off and switch the hoppers, and turn the changer back on.</li> <li>I. If the “Empty” LED on the front of the changer is now off, remove the right hopper and service this hopper. The changer will function in this mode until the hopper is fixed. <i>Remember to remove the coin chute from the hopper or the coins will fall into the changer instead of into the coin cup!</i></li> <li>J. If the “Empty” LED is still “ON”, turn off the changer.</li> <li>K. Reverse the hopper's plate connections, (top to bottom, bottom to top), and repeat steps F thru I. <i>Keep in mind that you are trouble shooting the Hopper Plates instead of the hoppers</i></li> </ol> </li> <li>5. Replace the Main Logic Board.</li> <li>6. Replace both hoppers.</li> <li>7. Replace both hopper plates with the harnesses.</li> </ol>
<b>C. The “Empty LED is lit. The decimal point on the light-up number display is “on” more than it is “off”.</b>	<ol style="list-style-type: none"> <li>1. Ensure the hoppers are pushed into the hopper's harness on the back of hopper plate tightly.</li> <li>2. Ensure that left and center green hoppers LED's are lit only. Not the left and right LED's. If this is the case go to pg. 20 to un-jam the hopper exit window.</li> <li>3. Replace the hopper.</li> <li>4. Replace the hopper's plate and harness.</li> </ol>

## TROUBLESHOOTING GUIDE

**TO USE THE TROUBLESHOOTING GUIDE, MATCH UP THE PROBLEM, THEN FOLLOW THE SOLUTION SUGGESTIONS.** After every step re-try operating the changer to see if the problem has been solved.

<b>PROBLEM:</b>	<b>SOLUTION:</b>
D. The green LED on the Main Logic Board is lit but the Light-up display does not.	<ol style="list-style-type: none"> <li>1. Bad 5 or 12vdc regulator on the main logic board.</li> <li>2. The hoppers are shorted.</li> <li>3. Replace main logic board.</li> <li>4. Replace hoppers.</li> </ol>
E. The bill validator accepts and stacks the bills, but the meter does not increase.	<ol style="list-style-type: none"> <li>1. Check continuity and for pin damage to the blue and yellow wires on the validator harness.</li> <li>2. Replace the validator wire harness.</li> <li>3. Replace the validator.</li> </ol>
F. The bill validator accepts and stacks the bills, and the meter does increase.	<ol style="list-style-type: none"> <li>1. Ensure the dip switch settings are still correct. (#3 "ON" only)</li> <li>2. Check the continuity of the brown and purple wires on the hoppers wire harness.</li> <li>3. The hopper is jammed. Go to pgs.26-28 to un-jam the hoppers.</li> <li>4. Replace the hoppers wire harness.</li> </ol>
G. The bill validator will not pull in the bill and the "Empty" LED is not lit.	<ol style="list-style-type: none"> <li>1. Ensure the orange wire going to the "Empty" LED is connected to the + or the terminal with the red mark by it.</li> <li>2. Check for 12vdc going to the orange and brown wires. If there is, replace the LED.</li> <li>3. Replace the main logic board.</li> <li>4. Replace the bill validator.</li> <li>5. Replace the validator wire harness.</li> </ol>
H. The bill validator pulls in the bill slightly then rejects it.	<ol style="list-style-type: none"> <li>1. Clean the validator. (pg.13)</li> <li>2. Remove the lower housing (pg. 12) of the bill validator. Ensure the center wheel spins freely. Push straight down on it slightly to loosen.</li> <li>3. Replace the bill validator.</li> </ol>
I. The bill validator red status LED flashes a "5" error code.	<ol style="list-style-type: none"> <li>1. Clean the validator optic LED's. (See pg.13)</li> <li>2. Ensure that all the wire harness plugs are plugged firmly into their white female sockets.</li> <li>3. Turn to the back page of this manual and check for a Coin Acceptors branch in your area to repair your bill validator .</li> </ol>
J. The bill validator red status LED flashes a "6 or 7" error code.	<ol style="list-style-type: none"> <li>1. Take the bill stacker off the bill validator. Cycle the power on / off using the switch on the main logic board and coast the silver push bar so that it stops in its fully extended position. Blow out the area behind the push bar with high pressure or canned air. Concentrate on the encoder wheel in the area top center behind the push bar.</li> <li>2. Turn to the back page of this manual and check for a Coin Acceptors branch in your area to repair your bill validator .</li> </ol>
K. The bill validators red status LED is on steady but it still will not accept the bill.	<ol style="list-style-type: none"> <li>1. Pull out the lower housing, see page 12 , and look for something obstructing the bill path. (i.e. gum, papers, tickets, coins, etc.)</li> <li>2. Look inside the Plexiglas case on the side of the bill validator. Ensure that all the wire harness plugs are plugged firmly into their white female sockets.</li> </ol>

## PARTS LIST FOR THE AC2005

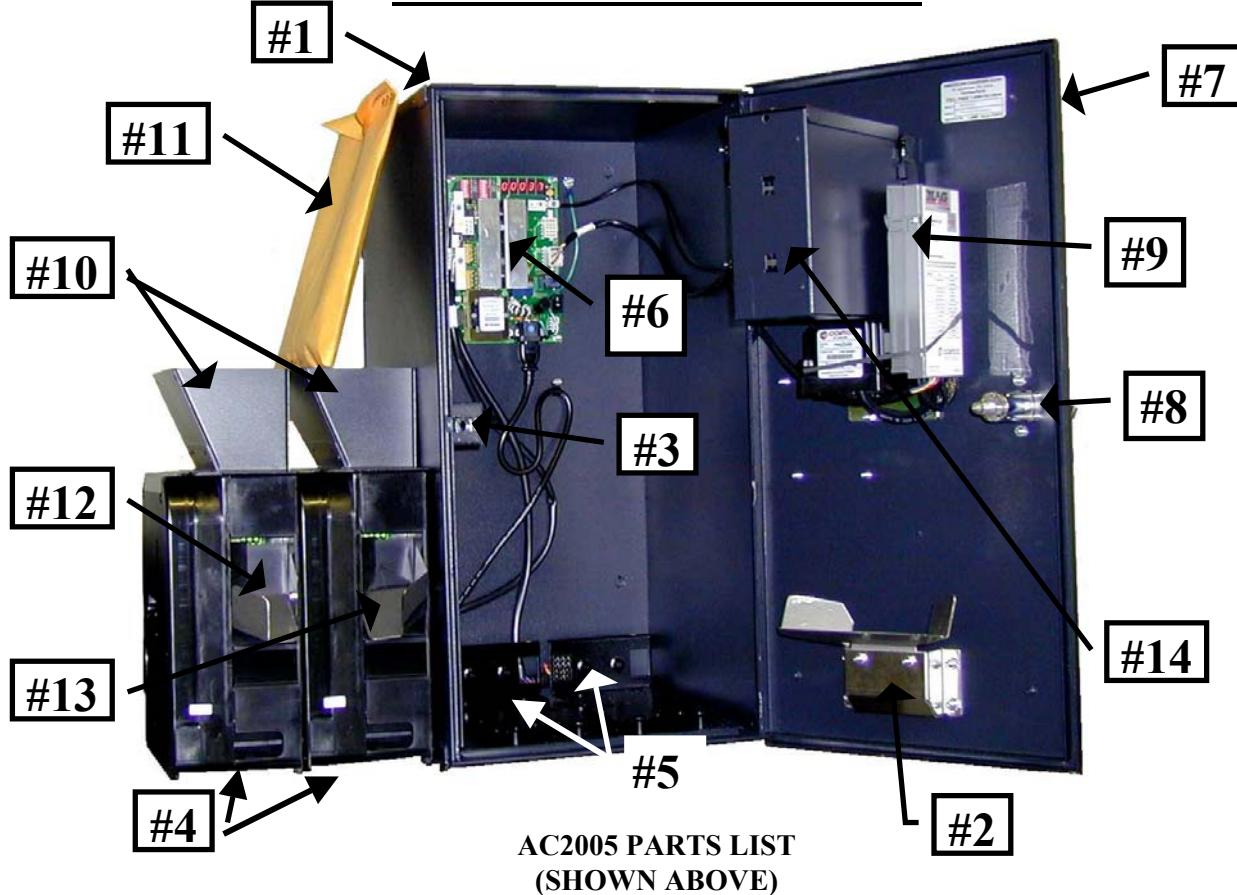


1. **AC2011** - CABINET COMPLETE W/ COIN CUP (#2) & LOCK BRACKET (#3).
2. **AC1010-01** - COIN CUP
3. **AC2010-40** - LOCK BRACKET ASSY. COMPLETE.
4. **AC1041.1** - COIN CONTROLS MKIV COIN HOPPER.
5. **AC1040.4** - COIN CONTROLS HOPPER PLATE W/ FEMALE PLUG & HARNESS.
6. **AC2061** - MAIN LOGIC BOARD.
7. **AC2085** - FULL FACE LEXAN FRONT.
8. **AC5080** - SCREW-IN T-HANDLE.
9. **AC9001.1** - COINCO BILL VALIDATOR.
10. **AC1042.2** - HOPPER EXTENSION (1) 1200 COINS EACH
11. **2905** - MANUAL PACKET
12. **2010-104** - LEFT CHROME COIN DIVERTER ONLY!
13. **2010-114** - RIGHT CHROME COIN DIVERTER ONLY!
14. **AC1044** - METAL 1000 BILL STACKER (USE AC1044-L FOR LOCKING VERSION)


### AC2005 OPTIONAL PARTS LIST (ITEMS NOT SHOWN.)

<b>AC9003</b>	-MARS AE2601-U5E BILL VALIDATOR
<b>AC2011.1</b>	-STAINLESS STEEL FRONT (NO STICKER)
<b>AC1090</b>	-DOOR/TILT ALARM
<b>AC1091</b>	-TILT ALARM ONLY
<b>AC1093</b>	-REGULAR SECURITY LOCK AND KEY (1)
<b>AC1095</b>	-MEDICO LOCK AND KEY (1)
<b>AC1094</b>	-MEDICO HARDEN STEEL T-HANDLE (1)

- #1 - 1041-24-01  
Motor
- #2 - 1041-24-02  
Motor Side Cover
- #3 - 1041-24-03  
Center Plate
- #4 - 1041-24-04  
End Plate
- #5A- 1041-24-05  
Counting Optic Board.
- #5B- 1041-24-06  
Optic ribbon cable.
- #6 - 1041-24-07  
Red Track Belt
- #7 - 1041-24-08  
MK4 Wire Harness
- #8 - 1040-24-113  
Male 12 pin connector
- #9 - 1040-24-112  
Female 12 pin connector
- #10 - 1041-24-10  
Idler gear
- #11 - 1041-24-11  
Gear Box
- #12 - 1041-24-12  
Gear Shaft
- #13 - 1041-24-13  
Plastic, Gear #1
- #14 - 1041-24-14  
Metal, Gear #2 & 3
- #15 - 1041-24-15  
Output gear
- #16 - 1041-24-16  
Metal, Gear #4
- #17 - 1040-24-22  
Blanking Plate
- #18 - 1040-24-25  
Fixing screw.

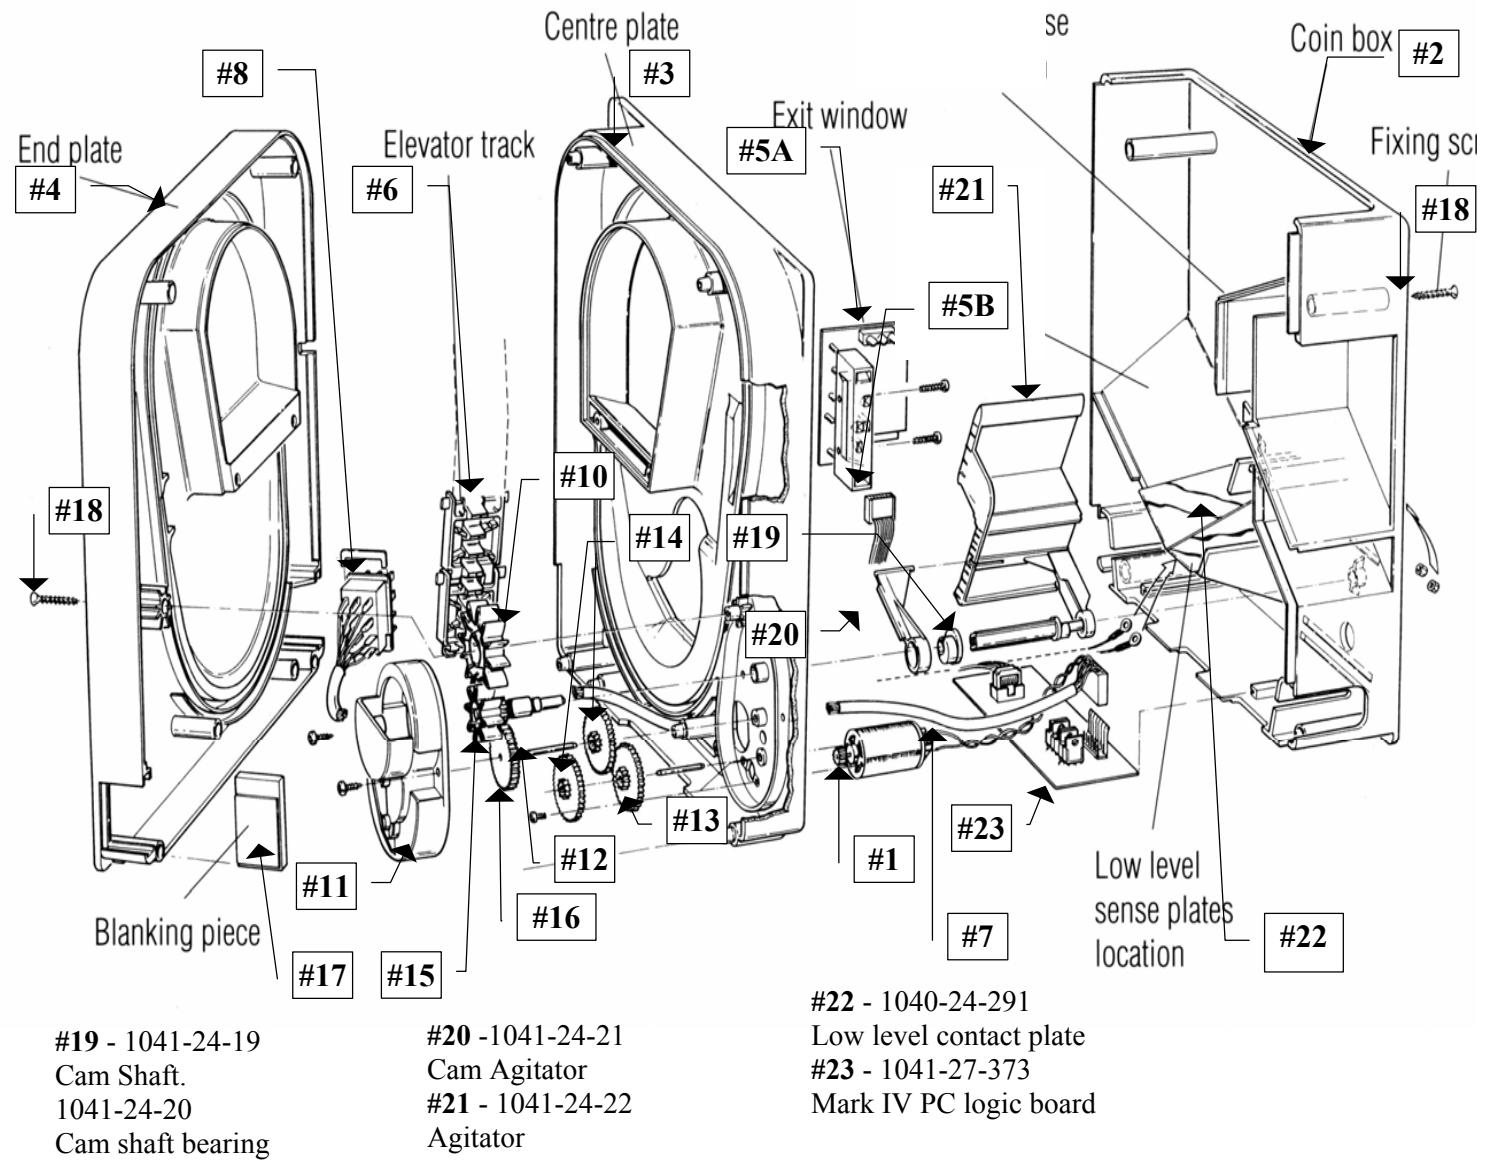


## **COINCO PARTS LIST**

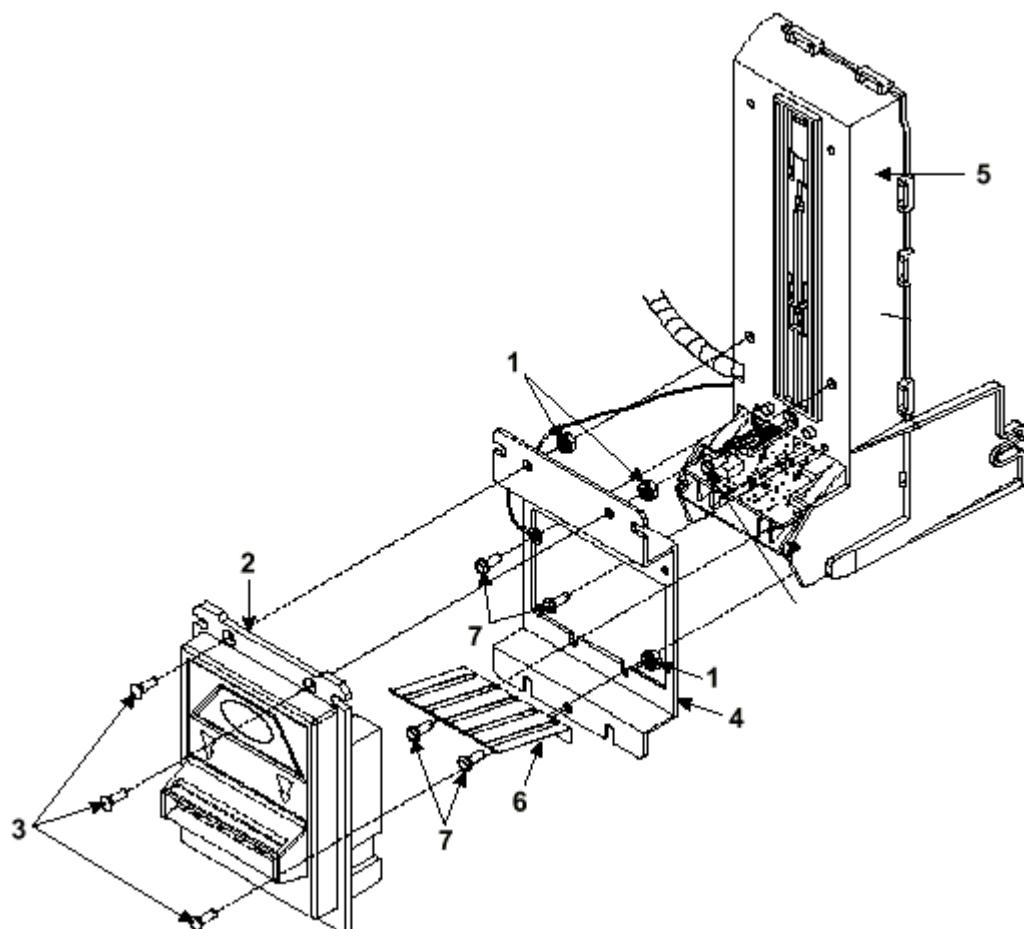


<b><u>PICTURE #</u></b>	<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
#1	MP90-1-1	Machine Screw
#2	MP91-1-2	"Snack Mask" Black Plastic
#3	MP90-1-3	Machine Screw
#4	MP90-1-4	Main Frame, Plastic
#5	MP91-1-5	Mask Gold Mounting Bracket
#6	MP90-1-6	Bill grounding spring
#7	MP91-1-7	Machine Nut

## COINCO PARTS BREAKDOWN

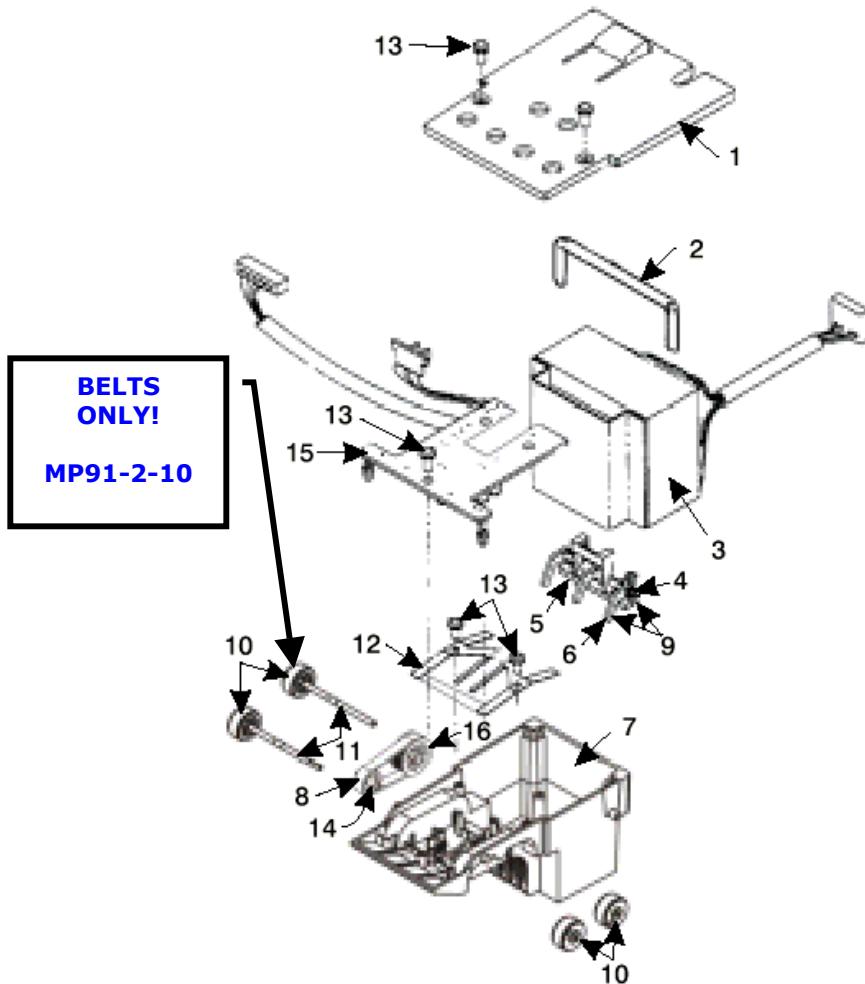


<b>PICTURE #</b>	<b>PART #</b>	<b>DESCRIPTION</b>
#1	MP90-2-1	Bottom Lower Housing Cover
#2	MP90-2-2	Transformer holding hose
#3	MP90-2-3	120VAC Transformer
#4	MP90-2-4	Lower Spring, Anti-Cheat Lever
#5	MP91-2-5	Lower Mounting, Anti-Cheat Lever
#6	MP90-2-6	Lower Anti-Cheat Lever
#7	MP90-2-7	Lower Housing Assembly, Complete
#8	MP90-2-8	Belt, Center
#9	MP90-2-9	Lower Anti-Cheat Assembly, Complete
#10	MP90-2-10	Plastic Wheels & Rubber Belts
<b>#10</b>	<b>MP91-2-10</b>	<b>Rubber Belts ONLY (Each)</b>
#11	MP90-1-11	Shaft, Drive
#12	MP90-2-12	Spring, MAG
#13	MP90-2-13	Screw, #4, Plastic
#14	MP90-2-14	Roller, Idler
#15	MP91-2-15	Sensor Board, Lower
#16	MP91-2-16	Pulley & Hub Assembly, Complete

### **COINCO PARTS BREAKDOWN**

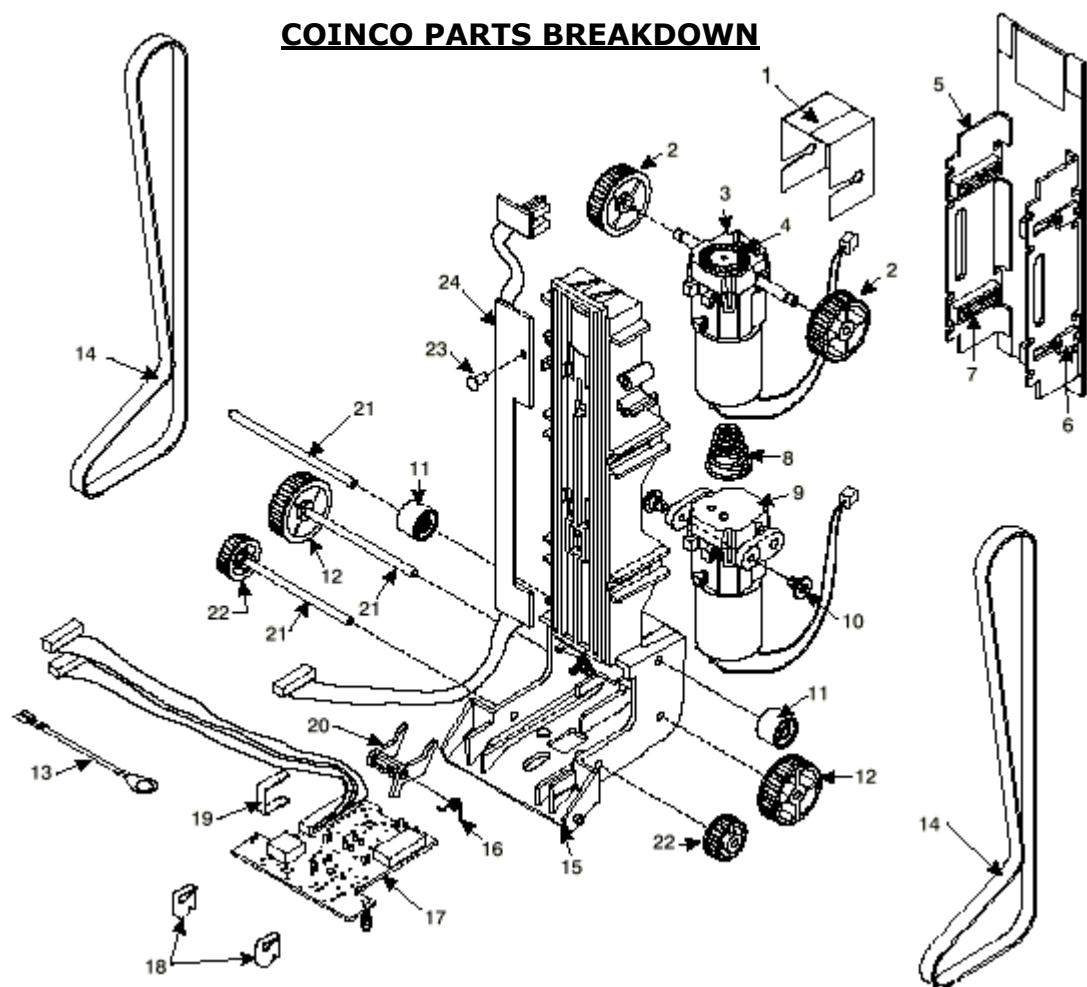

<b>PICTURE #</b>	<b>PART #</b>	<b>DESCRIPTION</b>
#1	MP90-3-1	Dust Cover
#2	MP90-3-2	Upper Transport & Hub Assembly, Complete
#3	MP90-3-3	Motor, Transport & Gear Assembly Complete
#4	MP90-3-4	Wheel, Encoder
#5	MP90-3-5	Stacker, Push-Plate Assembly
#6	MP90-3-8	Spring, Belt Tension
#7	MP90-3-9	Motor, Stacker Assembly Complete
#10	MP90-3-10	Pulley, Idler
#11	MP90-3-11	Lower Transport Pulley & Hub Assembly
#13	MP90-3-13	Belt, Upper Housing
#14	MP90-3-14	Frame, Upper Housing
#15	MP90-3-15	Sensor Board, Upper Housing
#16	MP90-3-16	Upper Board Clip
#17	MP90-3-17	Wire Clip
#18	MP90-3-18	Shaft, Pulley
#19	MP90-3-19	Shaft, Wheel
#21	MP90-3-21	Board, Stacker

## **COINCO PARTS BREAKDOWN**

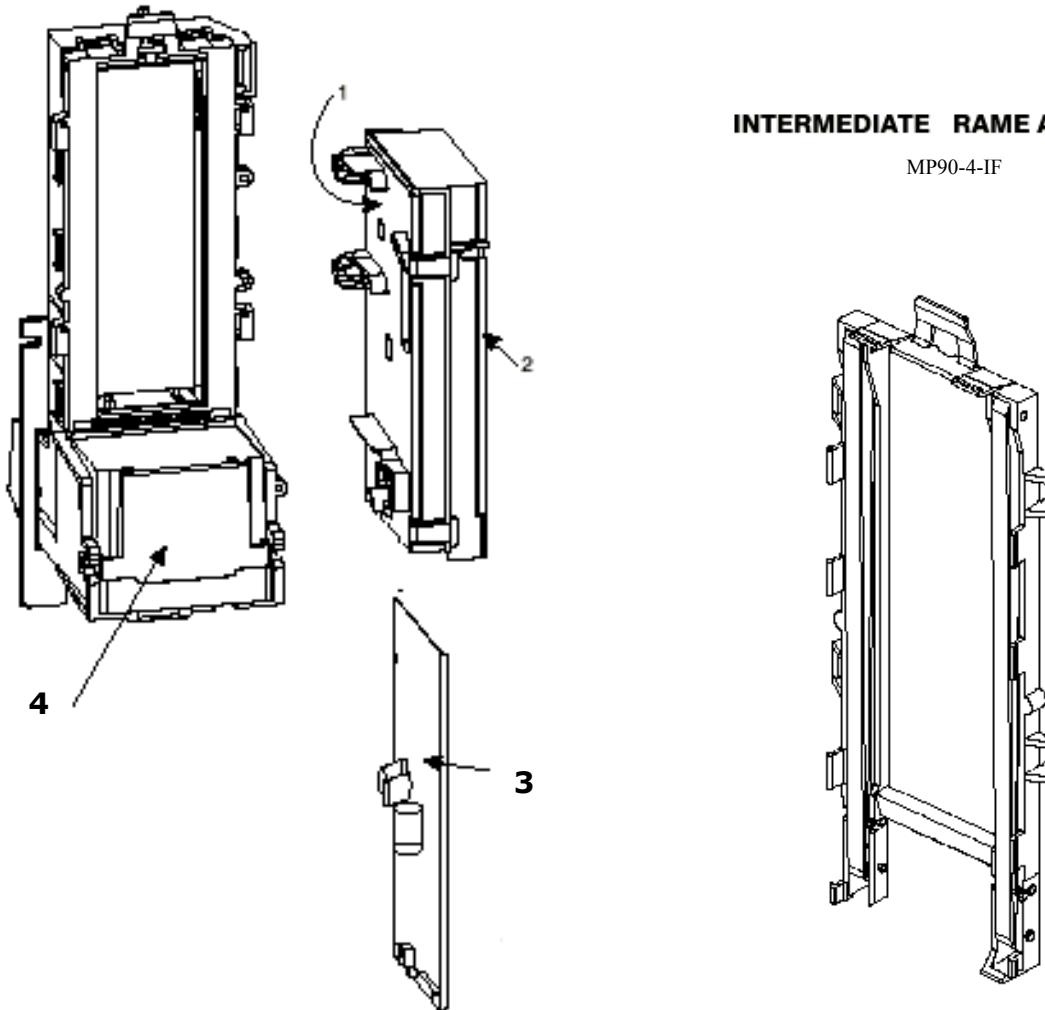


### **INTERMEDIATE FRAME ASSEMBLY**

MP90-4-IF


<b><u>PICTURE #</u></b>	<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
#1	MP90-4-1	Lid, Logic board Box
#2	MP91-4-2	Body, Logic board Box
#3	MP90-4-3	Main Logic Board
#4	MP90-4-4	Sticker, Serial Number / Warranty
#5	MP90-4-IF	Intermediate Frame with Bearings

## MARS AE2600 SERIES 24VDC PARTS BREAKDOWN

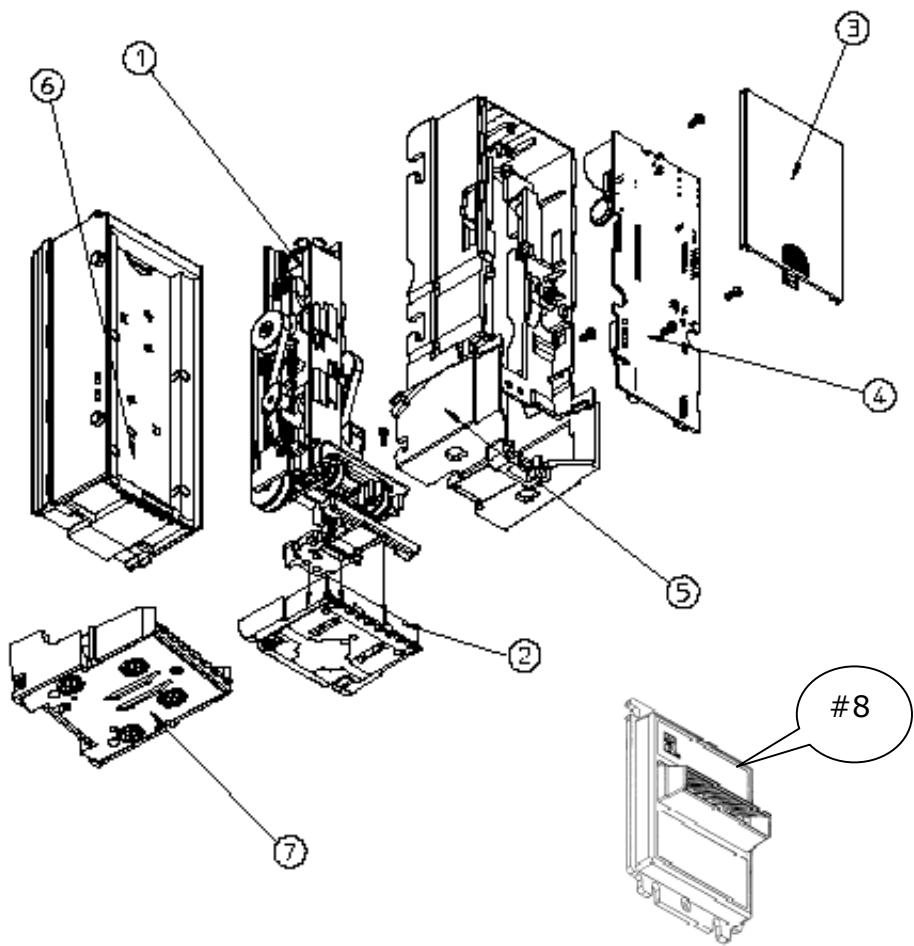


<u>PICTURE #</u>	<u>PART #</u>	<u>DESCRIPTION</u>
#1	AE93-1-1	Stacker/Drive Assembly Kit
#2	AE93-1-2	Sensor Housing Assy, Complete
#3	AE93-1-3	Control Board Cover, Plastic
#4	AE93-1-4	120VAC Logic Board
#5	AE93-1-5	Main Chassis, Plastic
#6	AC1045	500 Stacker
#7	AE93-1-7	LED Housing Assy, Complete
#8	AE93-1-8	Black Front Bezzle, Plastic
#9	AE93-1-9	Metal Bezzle Support Plate ( <b>NOT SHOWN</b> )

**CONTINUED**

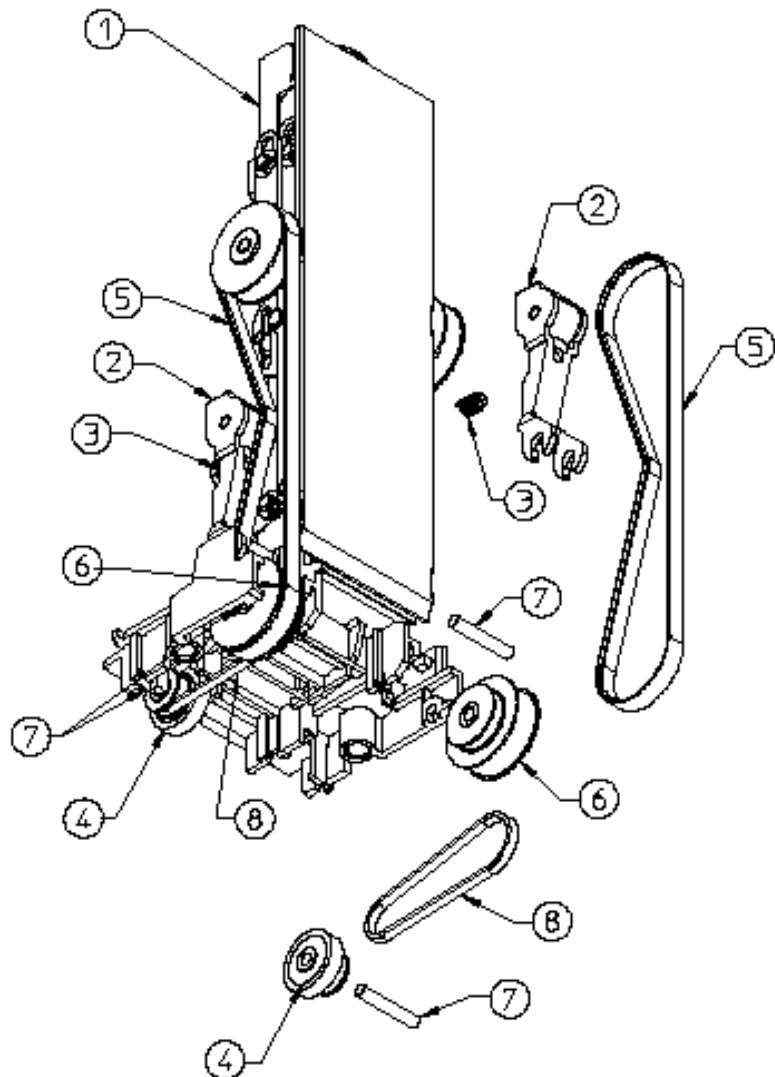

<b><u>PICTURE #</u></b>	<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
#1	AE93-2-1	Gearbox Assy
#2	AE93-2-2	Tension Assy
#3	AE93-2-3	Tension spring
#4	AE93-2-4	Tire/Wheel Assy
#5	AE93-2-5	Belt, Timing, (1 of 2)-143 Teeth
#6	AE93-2-6	Pulley, Compound
#7	AE93-2-7	Shaft, Pulley
#8	AE93-2-8	Belt, Timing, (1 of 2)-56 Teeth

**CONTINUED**

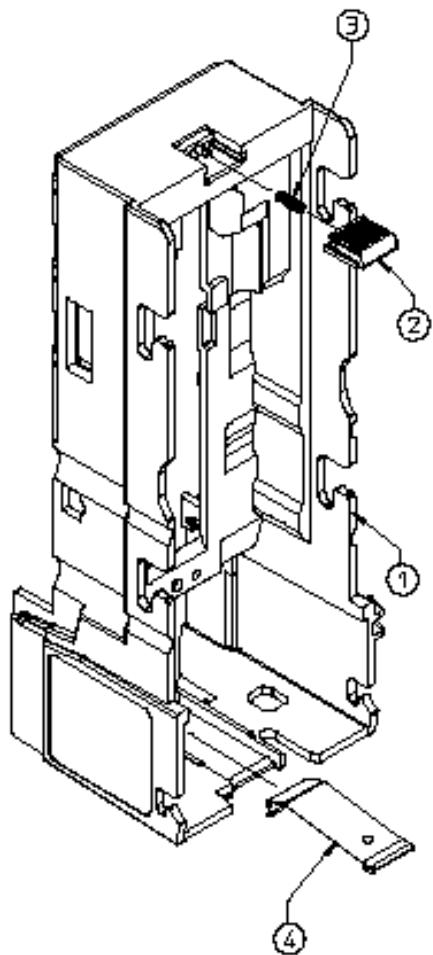

<b><u>PICTURE #</u></b>	<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
#1	AE93-1-5	Main Chassis, Plastic
#2	AE93-3-2	Stacker Latch, Blue
#3	AE93-3-3	Spring, Stack Latch
#4	AE93-3-3	Lower Housing Lift Spring



# MARS Authorized Service Centers

## ALABAMA

Birmingham Vending Co.  
Mr. Gerald Spiegelman  
540 N. 2nd Avenue  
Birmingham, AL 35204  
Phone: 205-324-7526  
Fax: 205-322-6639  
Email: [wendell@bhmvending.com](mailto:wendell@bhmvending.com)  
Web Site: [www.bhmvending.com](http://www.bhmvending.com)

## ARIZONA

Vendtronics  
Mr. Ken Van Leer  
4020 Grand Avenue, Suite #21  
Phoenix, AZ 85019-3173  
Phone: 602-973-3300  
Fax: 602-973-0033  
Email: [vendtronic@aol.com](mailto:vendtronic@aol.com)

## CALIFORNIA

Betson West  
Mr. John McCann  
5660 Knott Avenue  
Buena Park, CA 90621  
Phone: 714-228-7500  
Fax: 714-228-7510  
Web Site: [www.betson.com](http://www.betson.com)

Betson West  
Mr. Ben Fresenhazion  
213 E. Harris Avenue  
San Francisco, CA 94080  
Phone: 650-952-4220  
Fax: 650-827-3420  
Web Site: [www.betson.com](http://www.betson.com)

C.A. Robinson, Inc.  
Mr. James Tomei  
180 Utah Avenue  
S. San Francisco, CA 94080  
Phone: 650-871-4280  
Fax: 650-588-8538

G&K Service  
Mr. Vince D'Agostino  
4364 Twain Avenue, Unit #4  
San Diego, CA 92120  
Phone: 619-281-9227  
Fax: 619-281-8706

## Superior Sales & Service

Mr. Esko Wallace  
299 Old County Road, Suite 26  
San Carlos, CA 94070  
Phone: 800-995-8363 or  
650-591-2193  
Fax: 650-591-1712  
Email: [supsale@pacbell.net](mailto:supsale@pacbell.net)

## Trilogy Magnetics, Inc

Mr. Ed Colmenares  
16250 Gundry Avenue  
Paramount, CA 90723  
Phone: 562-663-1800  
Fax: 562-633-6408

## COLORADO

Mountain Coin Distributors  
Mr. Jack Brown  
345 W. 62nd Avenue  
Denver, CO 80216  
Phone: 800-654-2646 or  
303-427-2133  
Fax: 303-429-2104  
Email: [coinshop@msn.com](mailto:coinshop@msn.com)

## FLORIDA

V.E. South, L.C.  
Mr. Joe Gilbert  
4800 N.W. 15th Avenue  
Ft. Lauderdale, FL 33309  
Phone: 888-837-6884 or  
954-491-7300  
Fax: 954-491-7301  
Email: [vesouth@gate.net](mailto:vesouth@gate.net)  
Web Site: [www.vesouth.com](http://www.vesouth.com)

Vendor's Repair Service, Inc.  
Mr. George Uilano  
6025 Cinderlane Parkway  
Orlando, FL 32810  
Phone: 407-291-1712  
Fax: 407-578-0651  
[george@vendorsrepair.com](mailto:george@vendorsrepair.com)  
Web Site: [www.vendorsrepair.com](http://www.vendorsrepair.com)

## GEORGIA

North Atlantic Marketing\*  
Mr. Kirk Chambliss  
Norcross Center  
2100 Norcross Parkway,  
Suite 130  
Norcross, GA 30071  
Phone: 800-442-2388 or  
770-449-5001  
Fax: 770-729-1144

## Southeastern Vending

Mr. Johnny Williams  
1886 Forge Street  
Tucker, GA 30084  
Phone: 800-825-8554 or  
770-621-9055  
Fax: 770-621-9055  
Email: [repairshop32@aol.com](mailto:repairshop32@aol.com)  
Web Site:

## ILLINOIS

American Vending Sales, Inc.  
Mr. Frank Manduno  
750 Morse Avenue  
Elk Grove Village, IL 60007  
Phone: 847-439-9400  
Fax: 847-439-9405  
Email:  
[isharps@americanvending.com](mailto:isharps@americanvending.com) or  
[rnair@americanvending.com](mailto:rnair@americanvending.com)  
Web Site:  
[www.americanvending.com](http://www.americanvending.com)

## INDIANA

Shaffer Distributing  
Mr. Ron Dixon  
9461 E. Washington Street  
Indianapolis, IN 46229  
Phone: 800-876-0789 or  
317-899-2530  
Fax: 317-899-6080  
Email: [shafdist@netdirect.net](mailto:shafdist@netdirect.net)  
Web Site:  
[www.schafferdistributing.com](http://www.schafferdistributing.com)

**LOUISIANA**

Sur Serv Corp.  
Mr. Julian Ortiz  
2920 Kingman Street  
Suite 118  
Meltaire, LA 70006  
Phone: 504-887-1661  
Fax: 504-887-9081  
Email: [surserv@surserv.com](mailto:surserv@surserv.com)

**MARYLAND**

Betson  
Ms. Angie Swann  
3431A Benson Avenue  
Baltimore, MD 21227  
Phone: 800-296-4100  
Fax: 410-646-2053  
Email: [aswann@betson.com](mailto:aswann@betson.com)

**MASSACHUSETTS**

Gekay Electronics Corp.  
Mr. Rob Collette  
16 Deer Park Drive  
E. Longmeadow, MA 01028  
Phone: 800-832-0028 or  
413-525-2700  
Fax: 413-525-6886

**MICHIGAN**

Wolverine American, Inc.  
Mr. John Paskeretti  
26400 Capitol  
Redford, MI 48239  
Phone: 313-937-4600  
Fax: 313-937-1802

Wolverine American, Inc  
Mr. John Paskeretti  
3400 Jefferson Avenue, SE  
Grand Rapids, MI 49548  
Phone: 616-452-2125  
Fax: 616-452-3319

**MINNESOTA**

Changer Services, Inc.  
Mr. Mark Stolley  
7721 Pillsbury Avenue South  
Richfield, MN 55423  
Phone: 888-328-5067 or  
612-798-3610  
Fax: 612-798-3614  
Email:  
[mstolley@changerservices.com](mailto:mstolley@changerservices.com)

Viking Vending  
Mr. Guy Jones  
9549 Penn Avenue, South  
Minneapolis, MN 55431  
Phone: 800-879-0321  
Fax: 612-887-5656  
Email:  
[auneb@iebermanmusic.com](mailto:auneb@iebermanmusic.com)  
Web Site:  
[www.liebermanmusic.com](http://www.liebermanmusic.com)

**MISSOURI**

Greater America  
Mr. Duane Zarger  
3230 Roanoke Road  
Kansas City, MO 64111  
Phone: 816-531-4300  
Fax: 816-531-4337

**Midwest Associates, Inc.**

Mr. Glen Politte  
9334 Highway BB  
Hillsboro, MO 63050  
Phone: 800-237-0521  
Fax: 636-789-5848  
Email: [midwest@inlink.com](mailto:midwest@inlink.com)  
Web Site: [www.mwassoc.com](http://www.mwassoc.com)

Shaffer Distributing Co  
Mr. Chuck Ropke  
2111 January Avenue  
St. Louis, MO 63110  
Phone: 314-645-3393  
Phone: 314-645-3689

**MONTANA**

Action Gaming Technology\*  
Mr. Harold Heyer  
P.M.B. 117  
425 N. 5<sup>th</sup> Street  
Missoula, MT 59802  
Phone: 406-728-0034  
Fax: 406-549-0688  
Email: [actiongt@yahoo.com](mailto:actiongt@yahoo.com)

**NEVADA**

Mars Electronics International\*  
2700 East Patrick Lane, Suite 1  
Las Vegas, NV 89120  
Phone: 702-597-4836  
Fax: 702-597-4837  
Email: [bill.nichols@effem.com](mailto:bill.nichols@effem.com)

**NEW JERSEY**

Betson Enterprises  
Mr. Rob Zigmont  
303 Paterson Plank Road  
Carlstadt, NJ 07072  
Phone: 800-524-2343 or  
201-438-1300  
Fax: 201-438-4837  
Email: [zigrob103@aol.com](mailto:zigrob103@aol.com)  
Web Site: [www.betson.com](http://www.betson.com)

**Ellenby Technologies, Inc.\***

Mr. Bob Dobbins  
1460 Grandview Avenue, Unit 2  
MidAtlantic Corporate Center  
West Deptford, NJ 08066  
Phone: 856-848-2020  
Fax: 856-848-7080  
Email: [ellenby@aol.com](mailto:ellenby@aol.com)

**NORTH CAROLINA**

Brady Distributing Co., Inc.  
Mr. Roger Harrison  
2708 Yorkmont Road  
Charlotte, NC 28208  
Phone: 704-357-6284  
Fax: 704-357-1243  
Email: [rharrison@bradydist.com](mailto:rharrison@bradydist.com)  
Web Site: [www.bradydist.com](http://www.bradydist.com)

**Southeastern Vending**

Mr. John Hollar  
2748-B Interstate Street  
Charlotte, NC 28208  
Phone: 800-825-8555 or  
704-394-4911  
Fax: 704-394-3789  
Email: [svsinc@juno.com](mailto:svsinc@juno.com)

**OHIO**

Shaffer Distributing Co.  
1100 W. Third Avenue  
Columbus, OH 43212  
Phone: 800-282-0194  
Fax: 614-294-2669  
Email:  
[service@shafferdistribution.com](mailto:service@shafferdistribution.com)  
Web Site:  
[www.shafferdistribution.com](http://www.shafferdistribution.com)

**Vendors Exchange**

Mr. Brent Garson  
4020 Payne Avenue  
Cleveland, OH 44103  
Phone: 800-321-2311 or  
216-432-1800  
Fax: 216-432-2786  
Email: [Info@veii.com](mailto:Info@veii.com)  
Web Site: [www.veii.com](http://www.veii.com)

**OKLAHOMA**

Aeco Sales & Service  
Ms. Kacy Parker  
619 North Broadway  
Tecumseh, OK 74873  
Phone: 800-682-0358 or  
405-598-2915  
Fax: 405-598-5506  
Email: [kacy\\_AECO@ionet.net](mailto:kacy_AECO@ionet.net)

**OREGON**

Mountain Coin Machine Distributor  
Mr. Michael Damtew  
6440 N.E. Halsey  
Portland, OR 97213  
Phone: 503-234-5491 or  
800-233-5198  
Fax: 503-233-3816  
Email: [michael@dunis.com](mailto:michael@dunis.com)  
Web Site: [www.mountaincoin.com](http://www.mountaincoin.com)

**PENNSYLVANIA****MEI**

Mr. Al Serro  
1301 Wilson Drive  
West Chester, PA 19380  
Phone: 610-430-2500  
Fax: 610-430-2694  
Email: [rob.dowling@effem.com](mailto:rob.dowling@effem.com)  
Web Site: [www.meiglobal.com](http://www.meiglobal.com)

**SOUTH CAROLINA**

Drew Distributing, Inc.\*  
Mr. Gabe Mull  
9107 Ashville Highway  
Boiling Springs, SC 29316  
Phone: 864-578-4444  
Fax: 864-599-6232  
\*Limited Amusement Service  
Center

**TENNESSEE**

Brady Distributing Co., Inc.  
Mr. Brian Drost  
3306 Winbrook Drive  
Memphis, TN 38116  
Phone: 901-345-7811  
Fax: 901-398-0578  
Email:  
[Memphisshop@bradydist.com](mailto:Memphisshop@bradydist.com)  
Web Site: [www.bradydist.com](http://www.bradydist.com)

**TEXAS**

Aeco Sales & Service  
Mr. Eddy Parker  
10290 Monroe Drive #206  
Dallas, TX 75229  
Phone: 214-352-4755  
Fax: 214-352-8154

Serv-A-Mech Electronics, Inc  
Mr. Jerry Camp  
5916 West 34th Street #B  
Houston, TX 77092  
Phone: 800-323-7214 or  
713-681-6277  
Fax: 713-681-8570  
Email: [sameinc@aol.com](mailto:sameinc@aol.com)

**UTAH**

Wachtor Electronics  
Mr. Larry Wachtor  
73 West Truman Avenue  
Salt Lake City, UT 84115  
Phone: 801-485-2289  
Fax: 801-485-8745

**VIRGINIA**

Eastern Commercial Services  
Mr. Bob Vose  
813-A Professional Place,  
Suite 100  
Chesapeake, VA 23320  
Phone: 800-486-1020 or  
757-436-1020  
Fax: 757-547-4772  
Email:  
[bobvose@easterncommercial.com](mailto:bobvose@easterncommercial.com)  
Web Site:  
[www.easterncommercial.com](http://www.easterncommercial.com)

**WASHINGTON**

Wachtor Electronics  
Mr. Larry Wachtor  
232 S.W. 43rd Street  
Renton, WA 98055  
Phone: 425-251-0997  
Fax: 425-251-8532

**WISCONSIN**

Pioneer Sales & Service  
Mr. David Dopp  
N55 W13875 Oak Lane  
Menomonee Falls, WI 53051  
Phone: 262-781-1420  
Fax: 262-781-4307  
Email: [Pioneers@execpc.com](mailto:Pioneers@execpc.com)  
Web Site:  
[www.execpc.com1~pioneers](http://www.execpc.com1~pioneers)

Viking Vending pf Wisconsin  
Mr. Brent McKennon  
N59 W16600 Greenway Circle  
Unit B  
Menomonee Falls, WI 53051  
Phone: 262-703-4168  
Fax: 262-703-4171  
Email:

[brent.mckennon@vikinvending.com](mailto:brent.mckennon@vikinvending.com)

**CANADA**

Brokerhouse Distributors  
Mr. Bill Chadwick  
4275A Phillips Avenue, Unit  
4279  
Burnaby, BC, Canada V5A 2X4  
Phone: 604-421-2277  
Fax: 604-421-1184

**ONTARIO**

Arbortronics Limited  
Mr. Motek Szpindel  
1520 Lodestar Road, Unit 20  
Downsview, Ontario, Canada  
M3J 3C1  
Phone: 416-638-6112  
Fax: 416-638-0007  
Email: [atronics@funcow.com](mailto:atronics@funcow.com)  
Web Site:  
[www.yesic.com/~atronics](http://www.yesic.com/~atronics)

Brokerhouse Distributors  
Mr. Jeff Sujor  
108 Woodbine Downs Blvd.,  
Unit 4  
Rexdale, Ontario, Canada M9W  
5S6  
Phone: 416-798-3537  
Fax: 416-798-3603  
Email:  
[jsujor@brokerhousedist.com](mailto:jsujor@brokerhousedist.com)  
Web Site:  
[www.brokerhousedist.com](http://www.brokerhousedist.com)



# CoinCo Authorized Service Centers

**Arizona**

3226 S. Fair Lane  
Tempe, AZ 85282  
Phone: 602-431-0632  
Chris Mattingly

**California**

11618 E. Washington Blvd.  
Suite # J  
Whittier, CA 90606  
Phone: 562-692-3059

**FLORIDA****Tampa**

6704 Benjamin Road  
Suite 200  
Tampa, FL 33634  
Phone: 813-249-7338  
Bob Wilcox

**Ft. Lauderdale**

American Changer  
1400 NW 65<sup>th</sup> Place  
Ft. Lauderdale, FL 33309  
888-741-9840  
RMA # Needed

**Georgia**

4215 Wendall Dr SW  
Suite # E  
Atlanta, GA 30336  
Phone: 404-691-2777  
Chuck Crockett

**Illinois**

862 Eagle Dr.  
Bensenville, IL 60106  
Phone: 630-860-2650  
Mike Durec

**Louisiana**

524 Elmwood Pkwy  
Suite 190  
Harahan, LA 70123  
Phone: 504-734-0280  
Frank Case

**Maryland**

6655 Amberton Drive  
Bay "L"  
Baltimore, MD 21227  
Phone: 410-379-2680  
Bill LeJune

**Massachusetts**

60 Prospect Street  
Waltham, MA 02453  
Phone: 781-894-4525  
Kevin Cole

**Missouri**

1236 Dielman Industrial CT  
St Louis, MO 63132  
Phone: 314-725-0100  
Charlie Pavia

**Ohio**

225 Corporate Court  
Suite I  
Fairfield, OH 45014  
Phone: 513-874-4460  
Joe Steddom

**TEXAS**

**Dallas**  
3031 Quebec Street  
Suite 115  
Dallas, TX 75247  
Phone: 214-638-3970

**Houston**

2500 Central Parkway  
Suite "K"  
Houston, TX 77092  
Phone: 713-683-6558  
Steve TenBarge

**Washington**

1020 Industrial Drive  
Bldg. 32  
Seattle, WA 98188  
Phone: 206-575-1999  
Carl Goodson